



FOXYDRY AIR

Space-saving clothes dryer

ENG

foxydry®



INSTALLATION VIDEO

FOXYDRY AIR

ASSEMBLY INSTRUCTIONS

TOOLS NEEDED



■ Measure tape



■ Ladder



■ Pencil



■ Drill



■ Wrench



■ Star screwdriver



■ Hammer



■ Scissor

WARNINGS



FOXYDRY is a space-saving clothes drying rack / airer. It is not a toy. This product is not suitable for children. Small parts of FOXYDRY can be easily swallowed. COMETA S.r.l. shall not be liable or responsible for any personal injuries or damages to property caused by improper use of FOXYDRY.



FOXYDRY weighs 16 kg and is designed to carry a maximum load of 35 kg. **ATTENTION!!** Never exceed the stated load limit, as it could be dangerous and result in personal injuries or damages to property.



When Foxydry is operating, never place your hand or other objects between the scissor-type side structures.



We recommend that FOXYDRY is assembled and installed by qualified and experienced personnel. The place of installation must be protected from rain.

WARNINGS

IMPORTANT!! The ceiling must be strong enough to support the total weight of foxydry + maximum load capacity. Make sure that the plugs supplied with your clothes drying rack / airer are suitable for the material of your ceiling. If the plugs supplied with the product are not suitable for your ceiling, use suitable plugs instead.

ATTENTION!! Make sure that FOXYDRY has been mounted correctly to the ceiling before completing assembly.

COMETA S.r.l. shall not be liable or responsible for personal injuries or damages to property caused by improper installation of FOXYDRY



ATTENTION!! FOXYDRY requires an electrical connection. Disconnect the power before connecting the unit. COMETA S.r.l. recommends that FOXYDRY is installed and connected to the mains power supply only by qualified and experienced personnel. COMETA S.r.l. shall not be liable or responsible for any personal injuries or damages to property resulting from incorrect installation or connection of the unit by unskilled or inexperienced personnel. To ensure safety, please ensure grounding and make sure that the equipment operates under the indicated nominal power.


CONTENTS OF THE BOX



■ Cardboard template




■ FOXYDRY main body

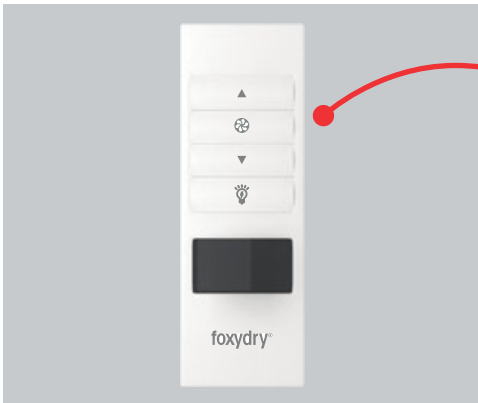


■ Remote control



- 2 plastic covers,
- 4 plugs, 4 screws,
- 20 screws M5X16

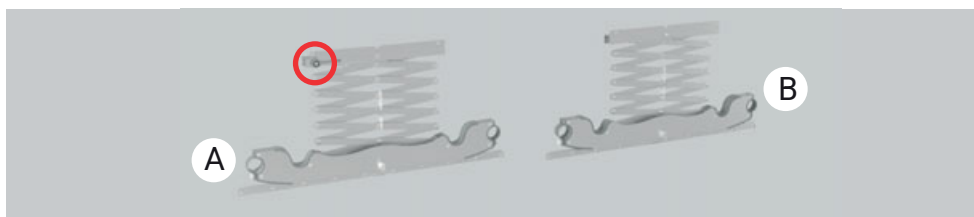

- Scissor-type side structures A-B

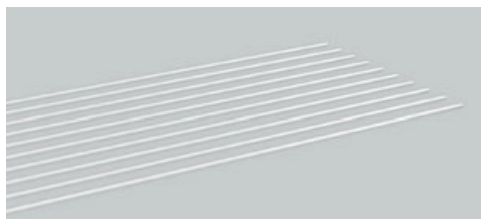

- 10 thin rails



- 2 double extendable rails


MAXIMUM SPACE OCCUPIED

OPEN




	A	+ B	+ B
AIR 120 ▶	cm 122	+ 40	+ 40

CLOSED


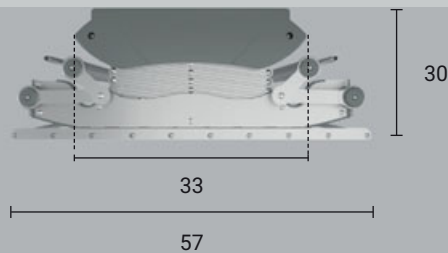


CEILING HOLES

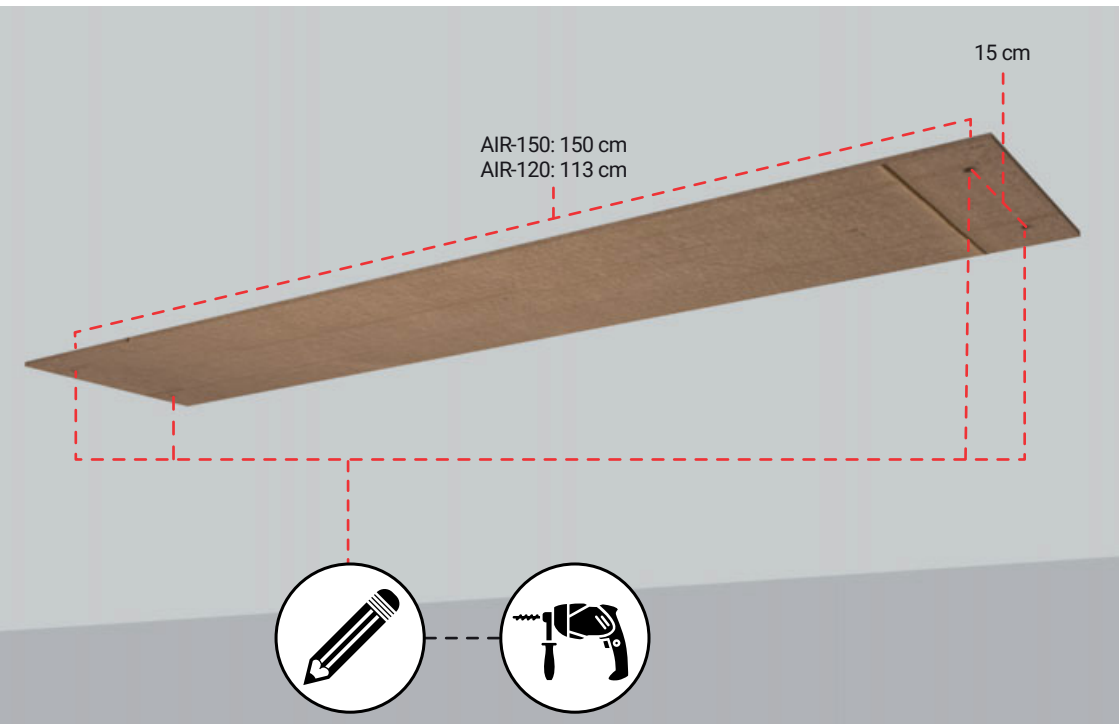


- Mark the position of the holes using the cardboard template and drill.

MOUNTING THE MAIN BODY

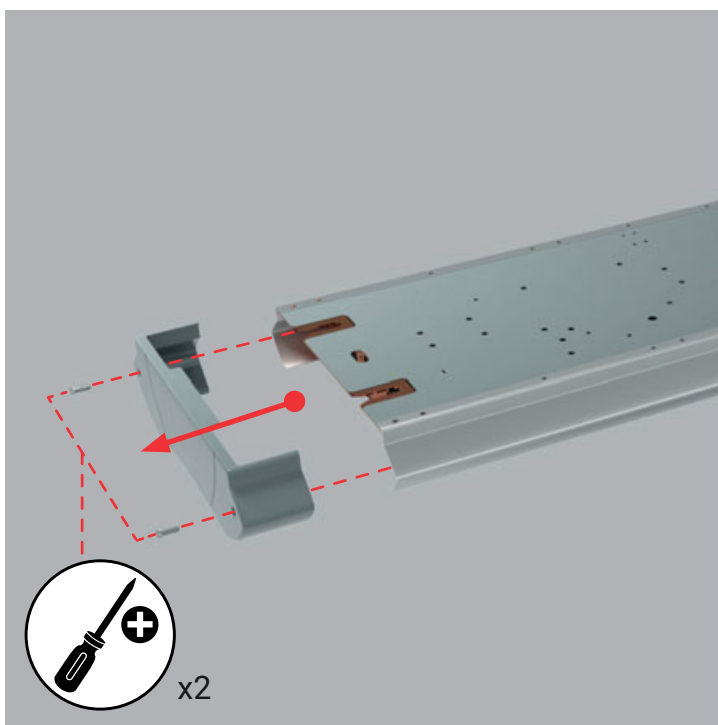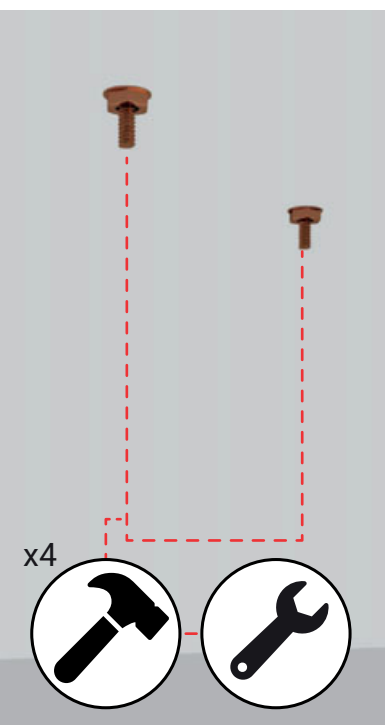


- Make sure that the plugs are suitable for your ceiling type. Insert the 4 plugs into the 4 holes, screw the nuts and tighten firmly and evenly. Unscrew and remove the side covers from the FOXYDRY main body.

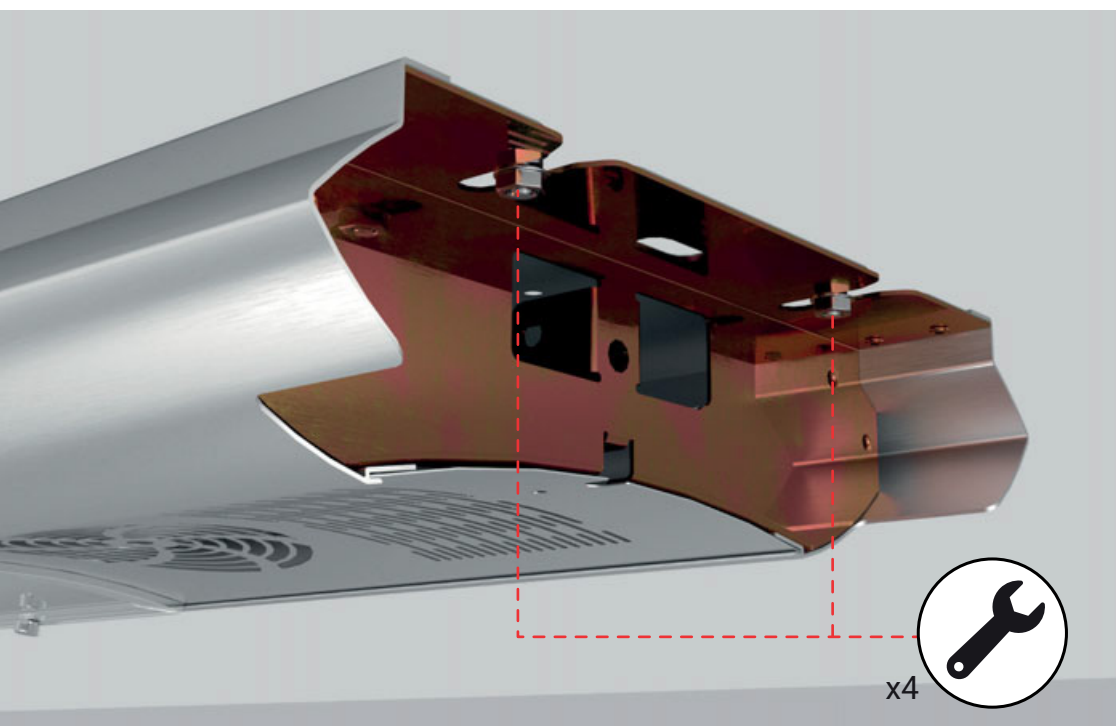

- Fix the FOXYDRY main body to the plugs, then tighten the nuts firmly and evenly.


FITTING THE SIDE STRUCTURES

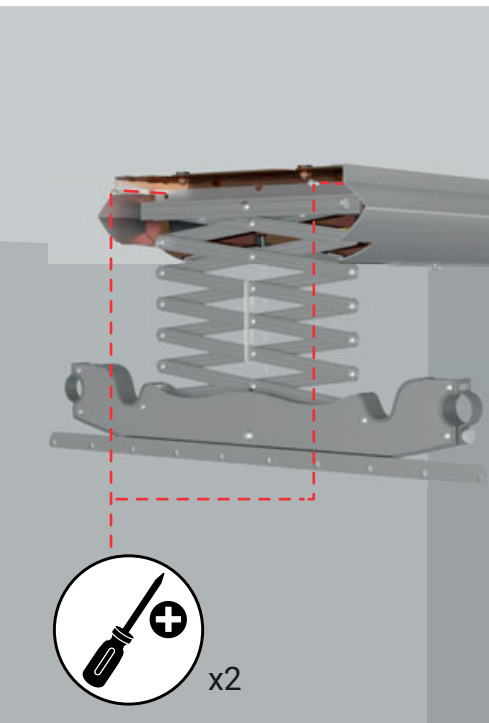

- Screw the side scissor-type structures onto the ends of the FOXYDRY main body.
ATTENTION!! Screw the side structure A in correspondence with the yellow limit switch, the side structure B on the opposite side.




When installing, do not pull these cables down for more than 1 m.

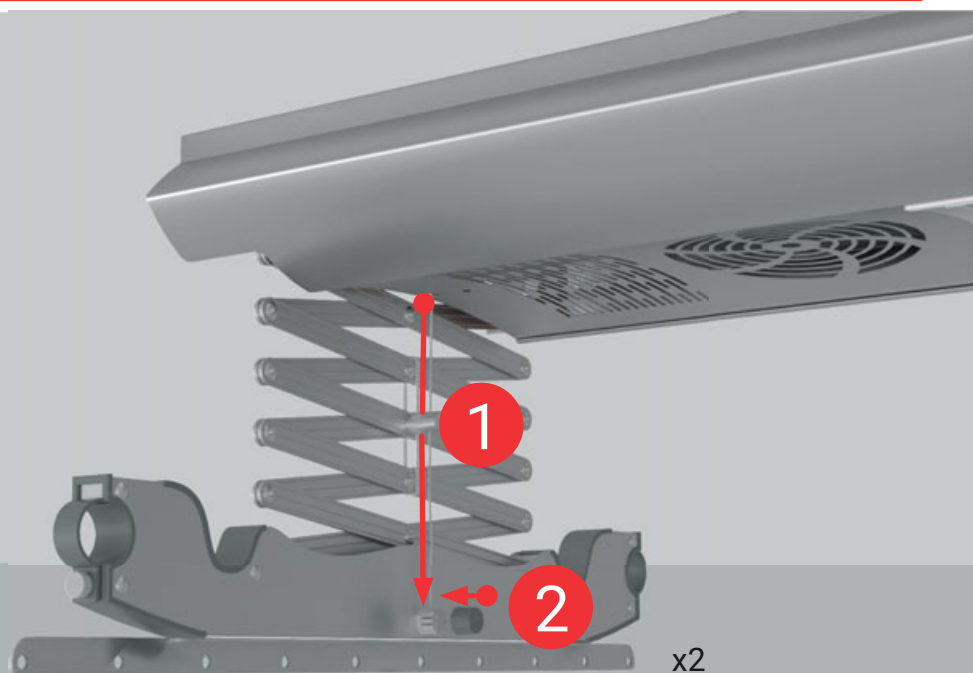


■ Slide the cable through the barrel connector located on the side structure. Slide the cable through the locking base. Push the plastic cover towards the locking base.

CONNECT TO THE POWER SUPPLY

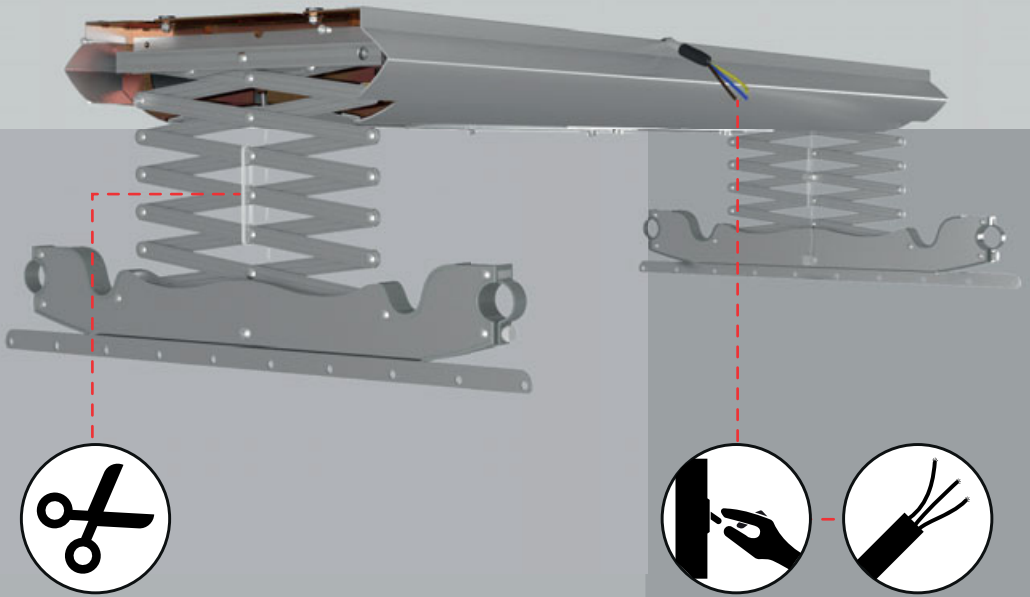


■ Cut off the plastic straps that secure the scissor-type side structures. **ATTENTION!!**
DISCONNECT THE POWER BEFORE CONNECTING FOXYDRY TO THE MAIN POWER SUPPLY.
Connect FOXYDRY to the power supply properly.

FITTING THE RAILS

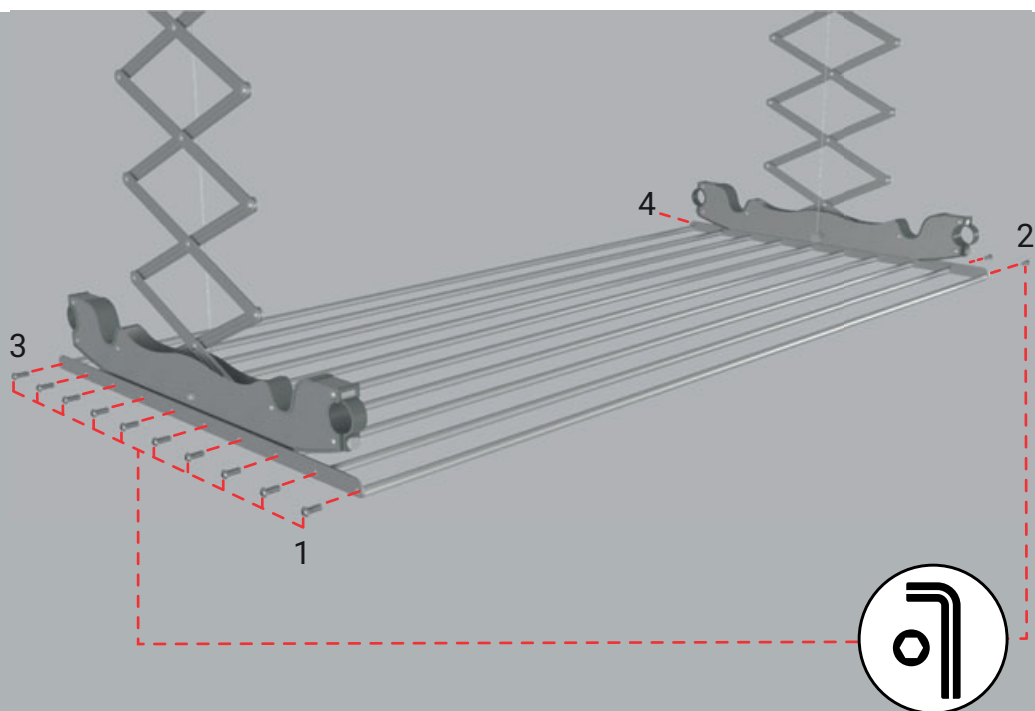


- Fasten by hand the 10 thin rails with the appropriate screws. Tighten the 4 screws at the ends of the drying rack without exaggerating. Tighten all other screws, without exaggerating.

FITTING THE RAILS

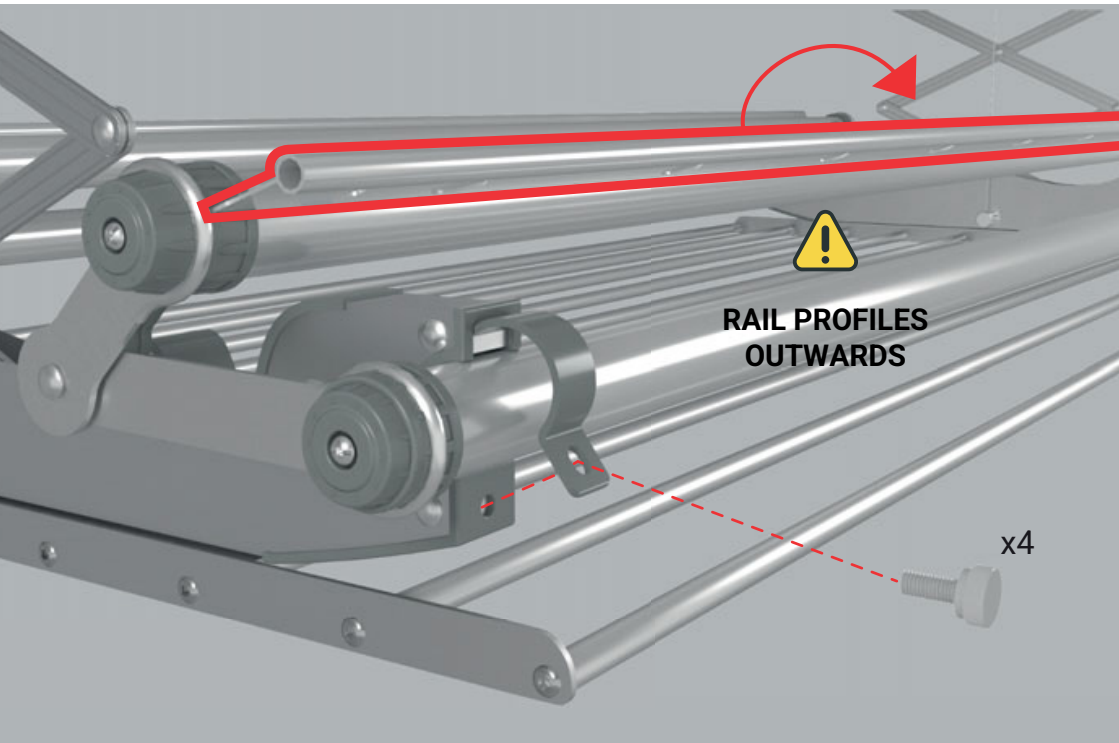



- Secure the extendable rails in the appropriate seats.

REMOTE CONTROL

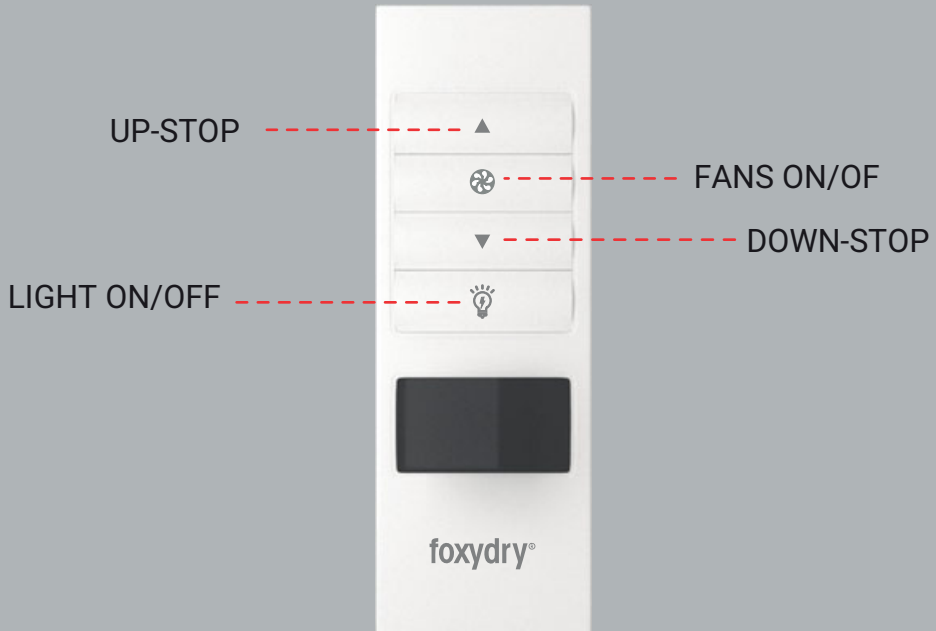


- Normally the remote control has already been connected to FOXYDRY. If not connected, perform the remote control registration procedure: 1. disconnect and reconnect FOXYDRY to the power line; 2. FOXYDRY will emit some long sounds; 3. during long sounds press the light button once and hold down the up button until FOXYDRY will emit 3 short sounds (recording is complete).

ACTIVATION OF THE LIMIT SWITCHES

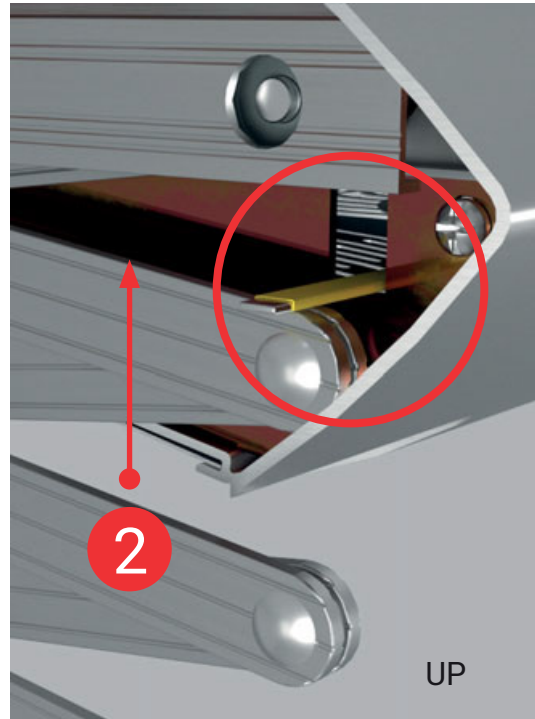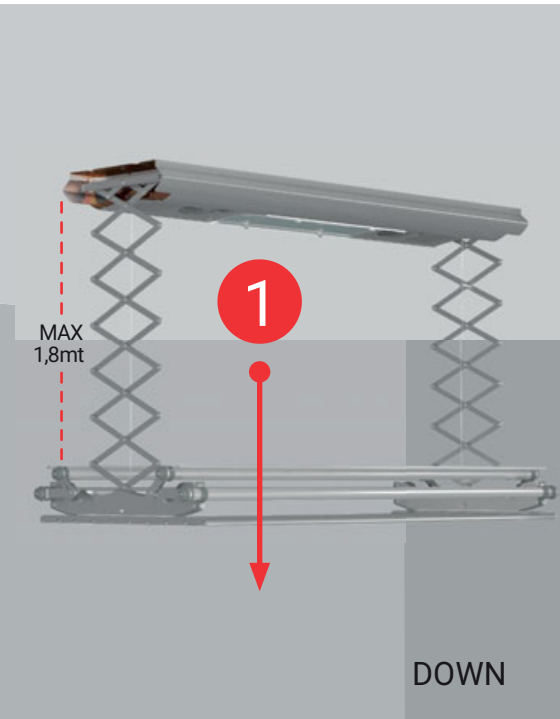


- Lower the drying rack with the down button. Make sure that the maximum descent limit switch activates (1.8 m from the ceiling). Raise the side structures with the up button. Check that the upper limit switch (yellow lever) activates.

CLOSING THE SYSTEM

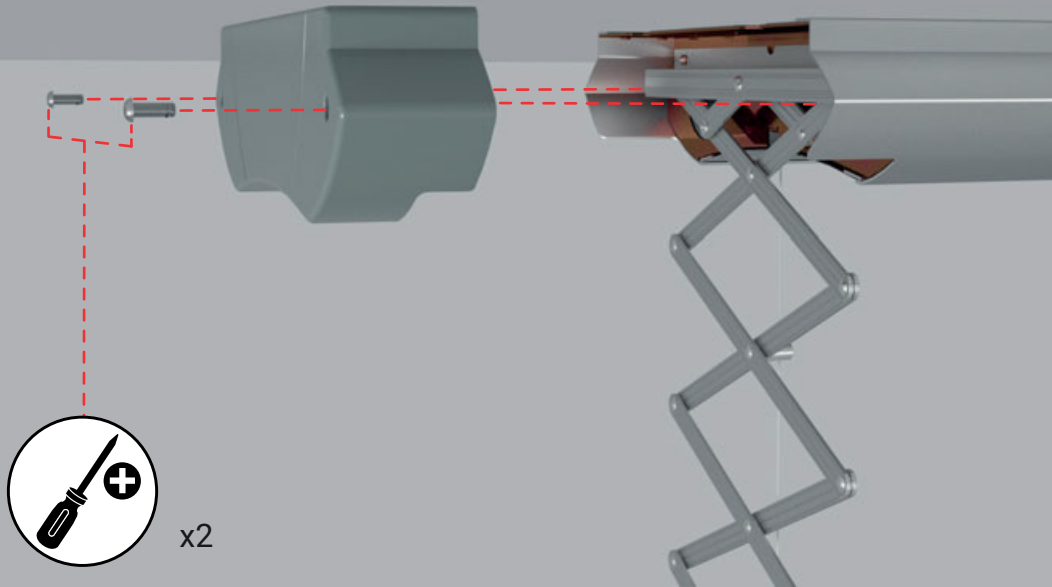

- Screw the two plastic covers back onto the ends of the FOXYDRY central body.

OPERATION (UP/DOWN)

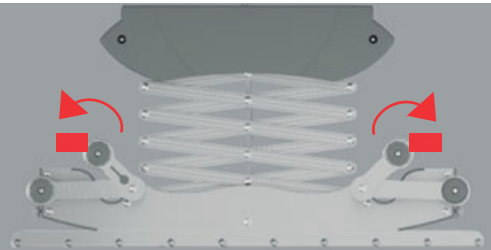


**RAIL PROFILES
OUTWARDS**



Press the down button to lower the drying rack. Press the up button to raise the drying rack. To stop the drying rack at an intermediate height, press the down button while it goes down and the up button while it goes up.



OPERATION (LIGHT)

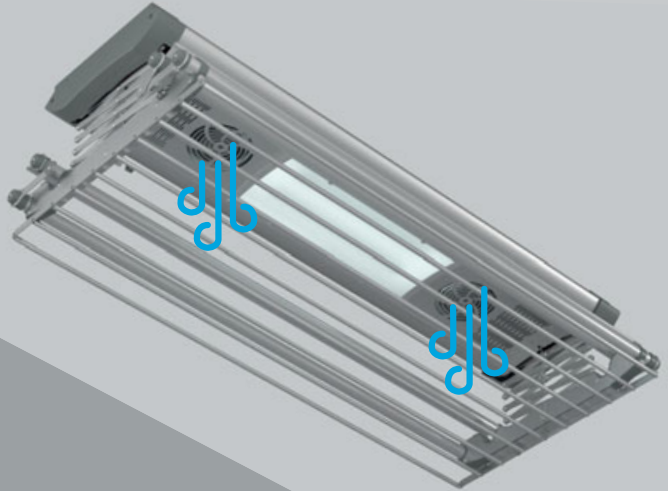

- The second button brings the rack back up and starts the fans. The fans switch on only if the clothesline is in the maximum upward position. The fans will turn off by themselves after 3 hours of consecutive use. The fourth button turns the lamp on and off.


OPERATION (FAILURE)

SAFETY AUTOMATIC STOP!

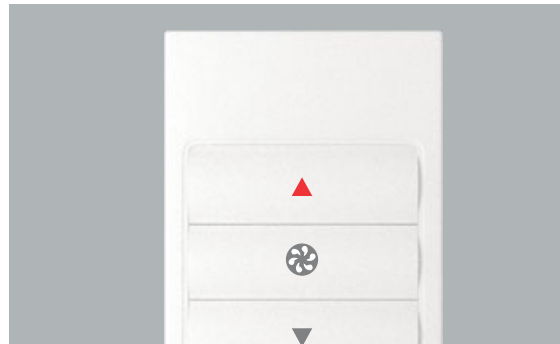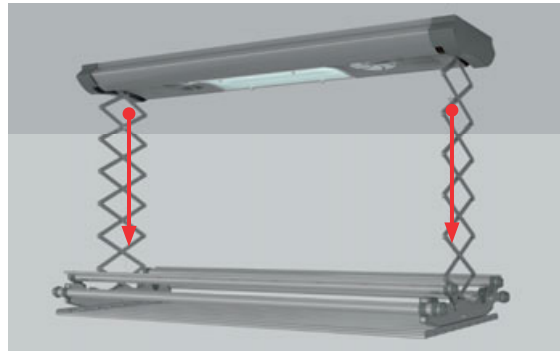

■ During the downward movement FOXYDRY will automatically stop if it is to rest on an obstacle (underload safety). Remove obstacle or pull down the two steel cables at the side structures and simultaneously press the up button to restart FOXYDRY.

OPERATION (FAILURE)

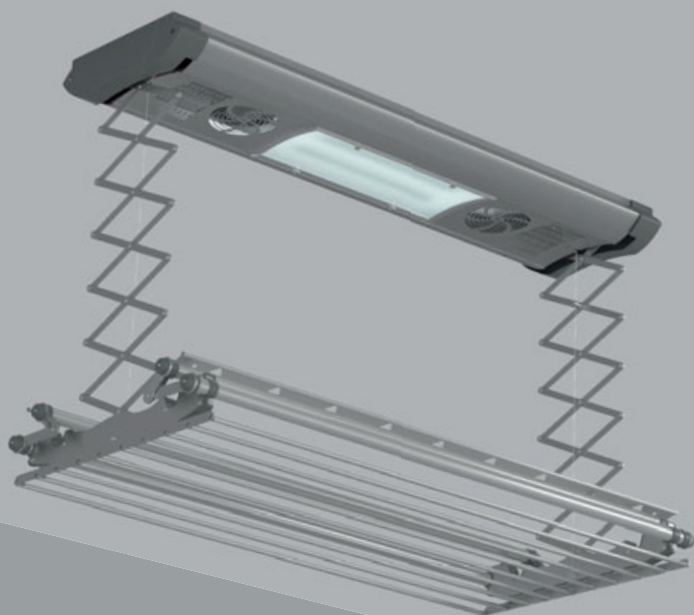

■ During the upward movement FOXYDRY will automatically stop if it detects a load of more than 35kg (safety by overload). Remove the excess load to restart FOXYDRY. If FOXYDRY is operated for more than 4 consecutive minutes, the thermal block will be activated for a few minutes. Wait until cooling occurs to restart it.

foxydry®

viyar

 0 (800) 100 100

 office@viyar.ua

 viyar.com