


INSTALLATION INSTRUCTION OF PANTRY BASKET








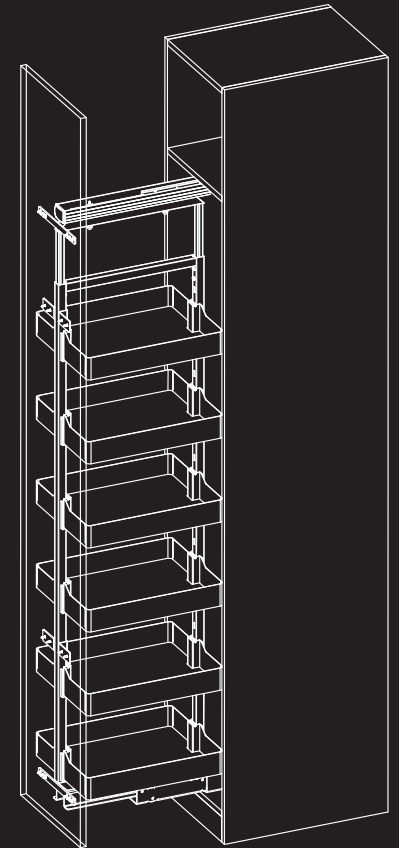


viyar

sales@viyar.com | viyar.com

RELIABLE FITTINGS ARE DURABLE FURNITURE


Installation Instruction of Pantry Basket

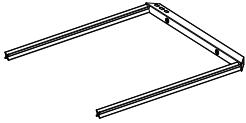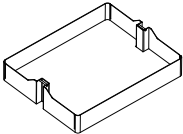A Main frame	Qty	B Upper adjustment frame	Qty	C Baskets	Qty
	1		1		6 layers 6 PCS 5 layers 5 PCS 4 layers 4 PCS
D Heavy loading capacity slide	Qty	E Upper slide	Qty	F T-shaped door panel connector	Qty
	1		1		2
G Concave door panel connector	Qty	H 4 mm allen key	Qty	I Installation Card	Qty
	2		1		1
J Plastic hook for basket	Qty	K M8 nut	Qty	L Cross-head machine screws (M6×40)	Qty
	6 layers 12 PCS 5 layers 10 PCS 4 layers 8 PCS		2	 M6×40	4
M Hex socket round head machine screws (M6×16)	Qty	N Flat-head self-tapping screws (ST4×16)	Qty	Electric drill	Qty
 M6×16	2	 ST4×16	35		


Product specifications and applicable cabinets

Model	Specification	Length*Depth*Height (mm)	Cabinet Width (mm)
82135B	5 layer	250*480*(1450-1750)	300
82136B	6 layer	250*480*(1800-2100)	300


1. Installation of slide

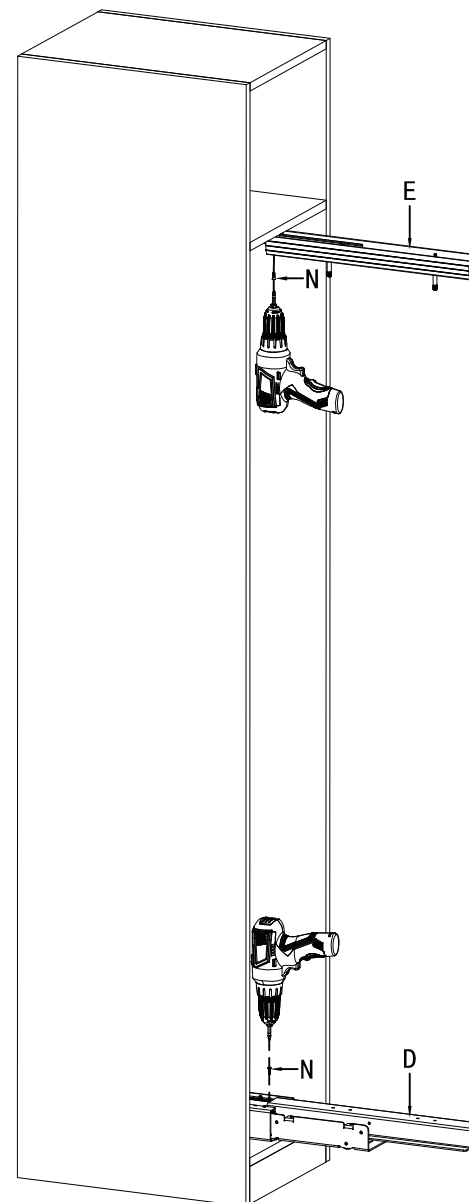


1.1 Pre-drill holes according to the mounting card's hole positions, then secure the Upper slide with ST4*16 screws.

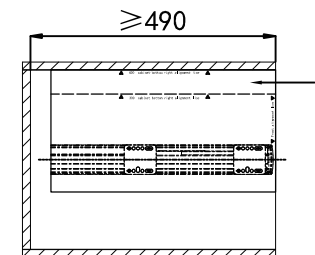


1.2 Pre-drill holes according to the mounting card's hole positions, then secure the Heavy loading capacity slide with ST4*16 screws.

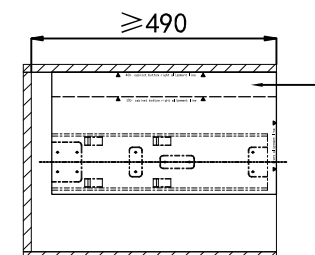

2. Installation of main frame

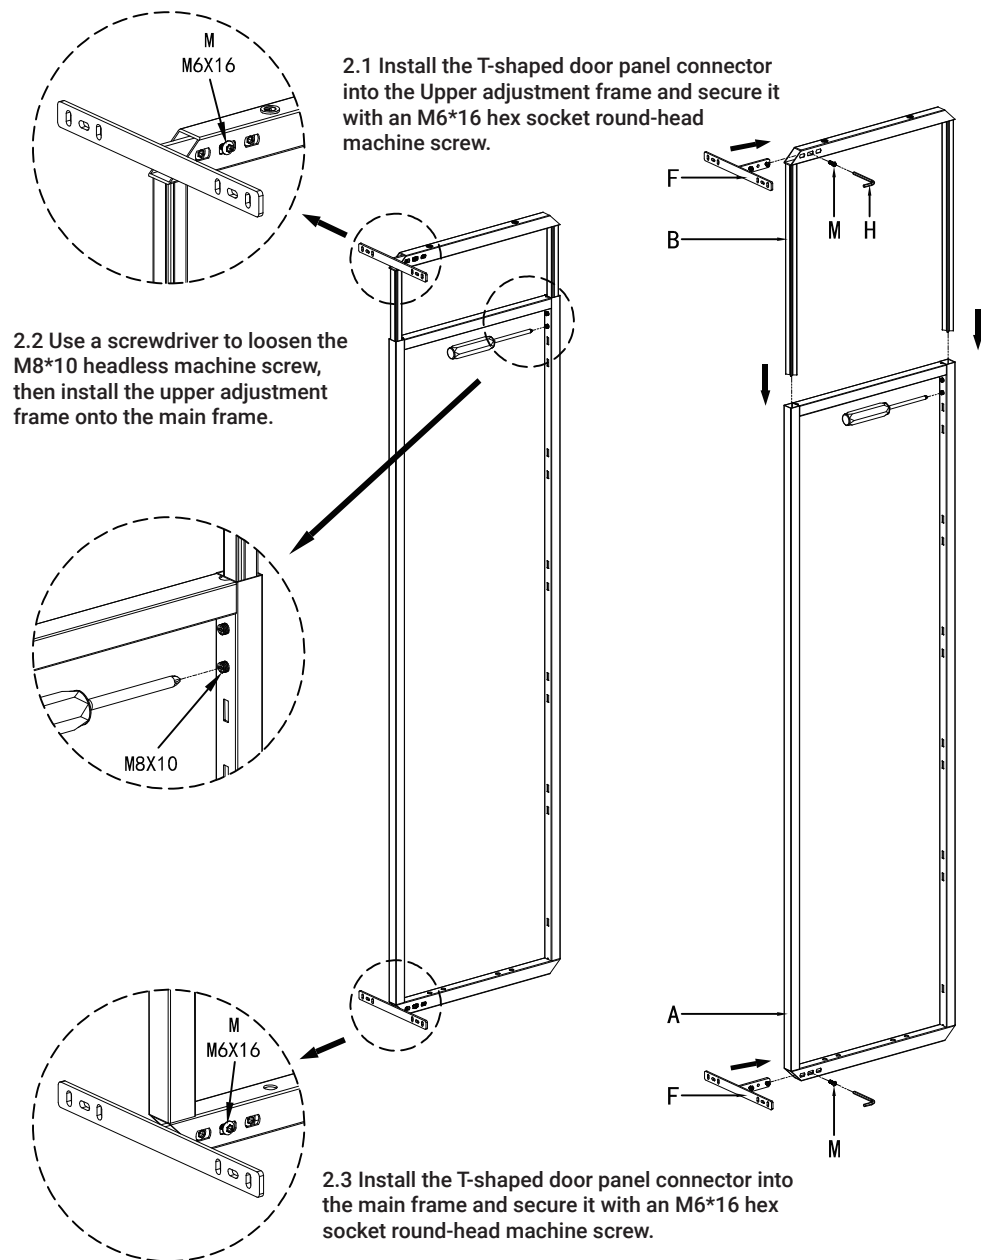

3. Installation of the Door panel

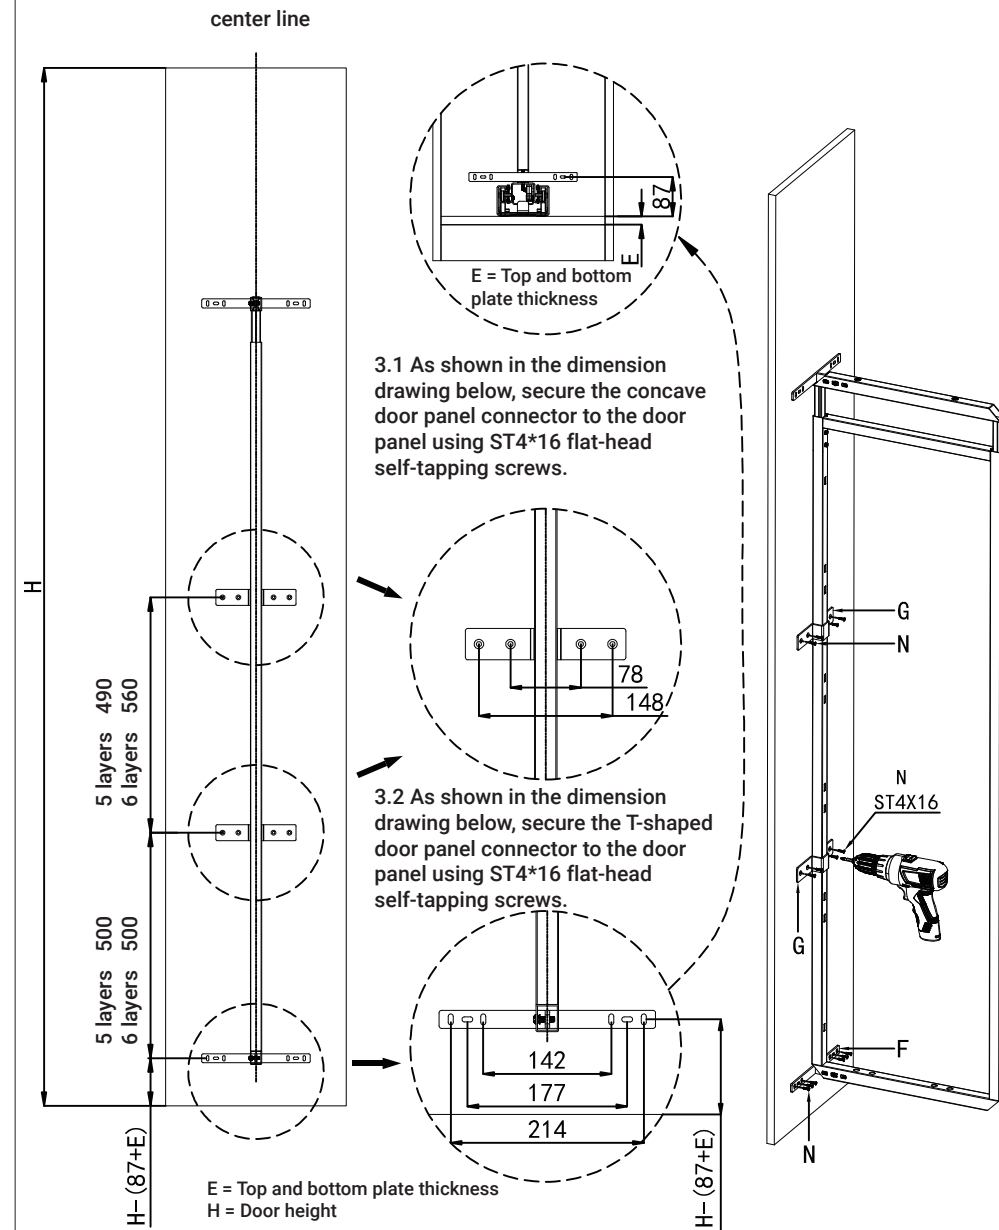

4. Installation of the main frame and door adjustment


4.4 Secure the T-shaped door panel connector to the door panel using ST4*16 flat-head self-tapping screws.

The center dimension from the top panel to the T-shaped door panel connector is 65 mm.

4.2 Adjust the height of the upper adjustment frame and secure the corresponding holes on the upper slide using K (M8 nuts).

4.3 Securely fasten the M8*10 headless machine screws with a screwdriver.

4.1 Secure the main frame to the Heavy loading capacity slide using an M6*40 Phillips-head machine screw with a screwdriver or electric drill.

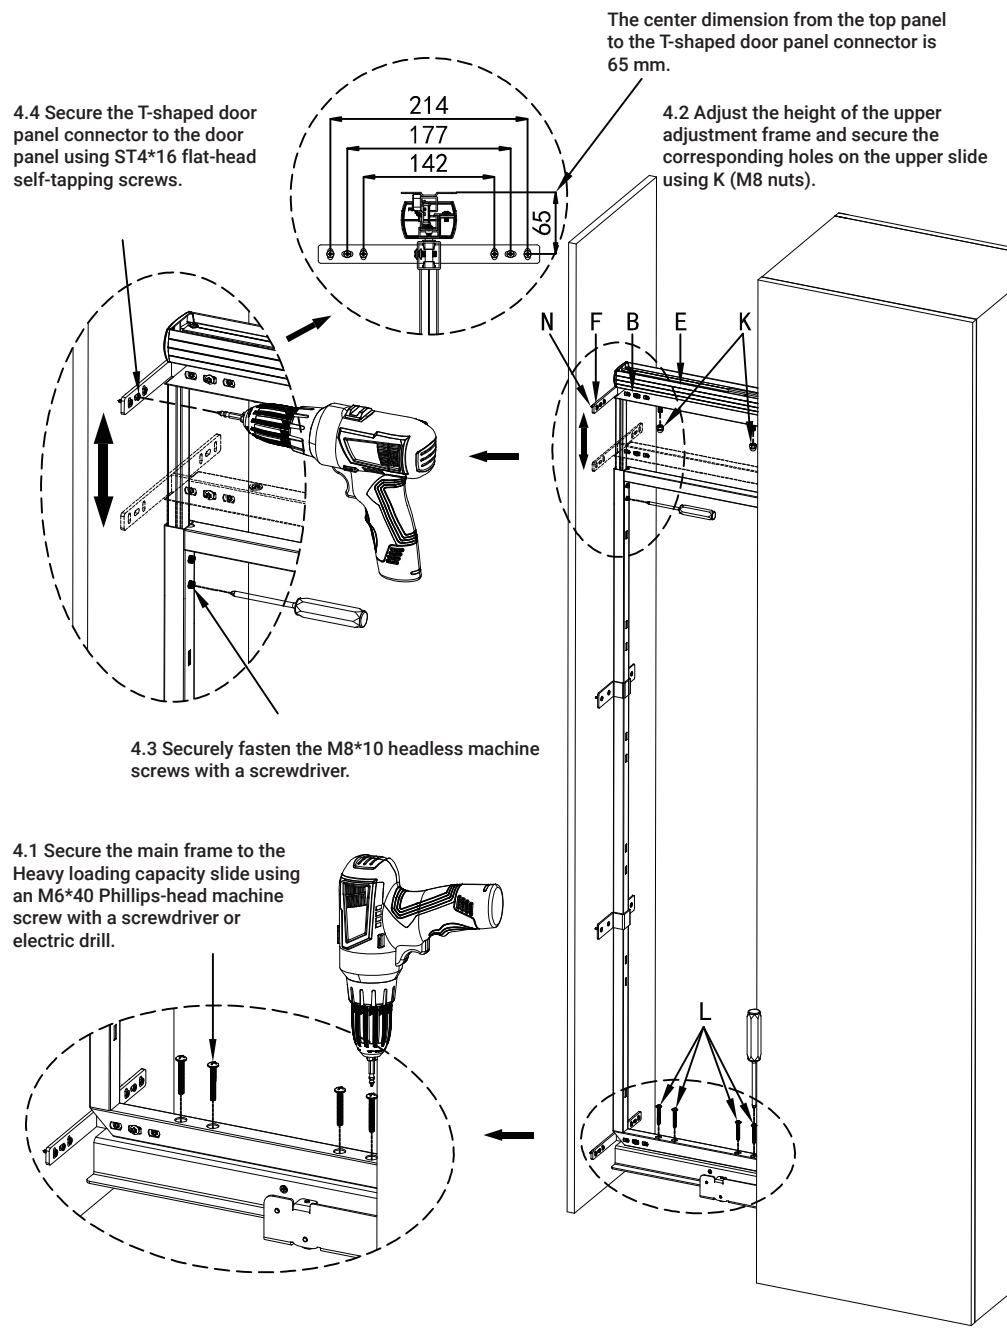

4.5 After the assembly is completed, use the T-shaped door panel connector screws to adjust the position of the door panel so that it is centered in the cabinet.


Turn the left and right screws clockwise to adjust the door panel to the right; turn the left and right screws counterclockwise to adjust the door panel to the left; then tighten the middle screw.

M (M6*16 Hex socket round head machine screws)
This screw locks the main frame.

These screws adjust the left and right position of the door panel and the verticality of the main frame.



M (M6*16 Hex socket round head machine screws)
This screw locks the main frame.

These screws adjust the left and right position of the door panel and the verticality of the main frame.

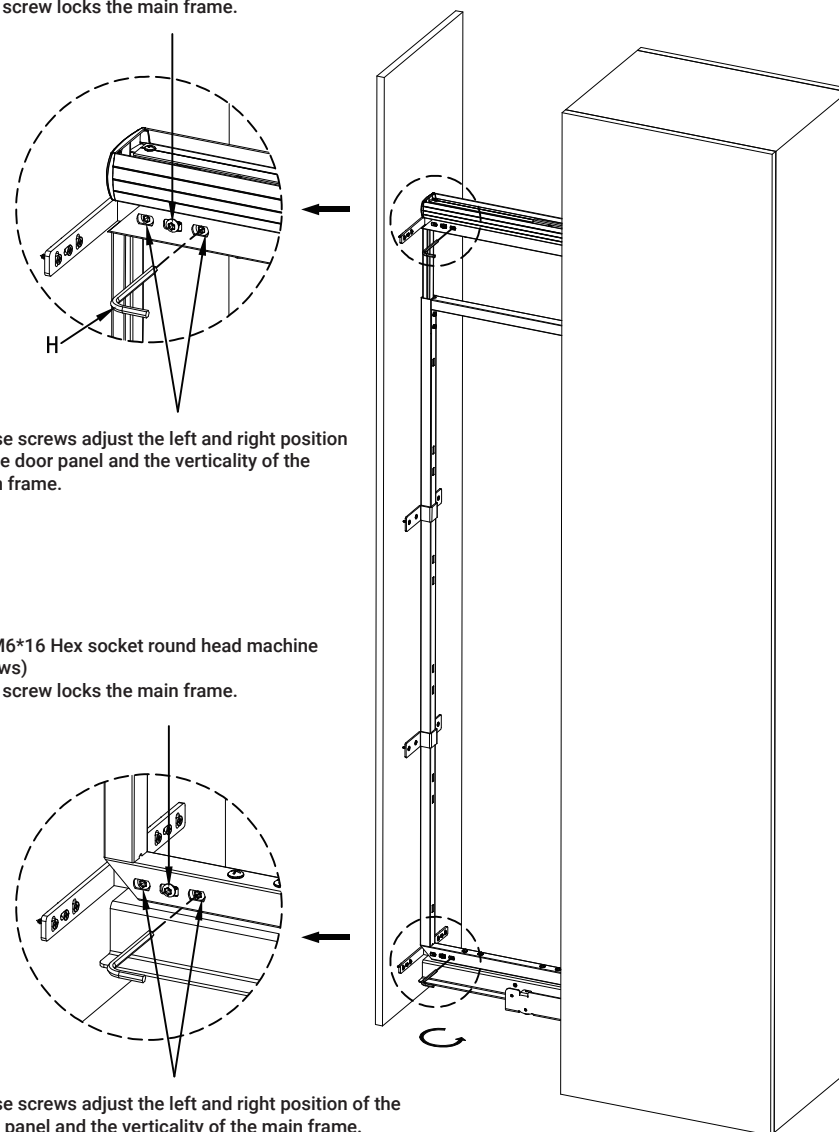


5. Installation of the baskets

5.1 Connect the basket to the main frame at the appropriate position using the hanging block.

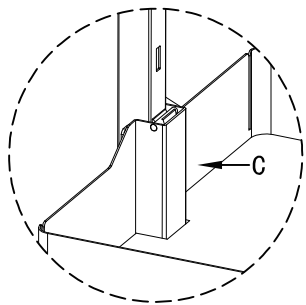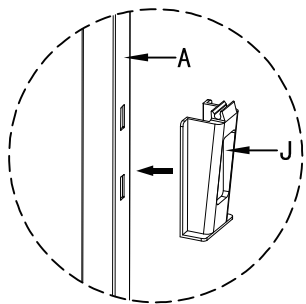

5.2 Place the basket over the plastic part.

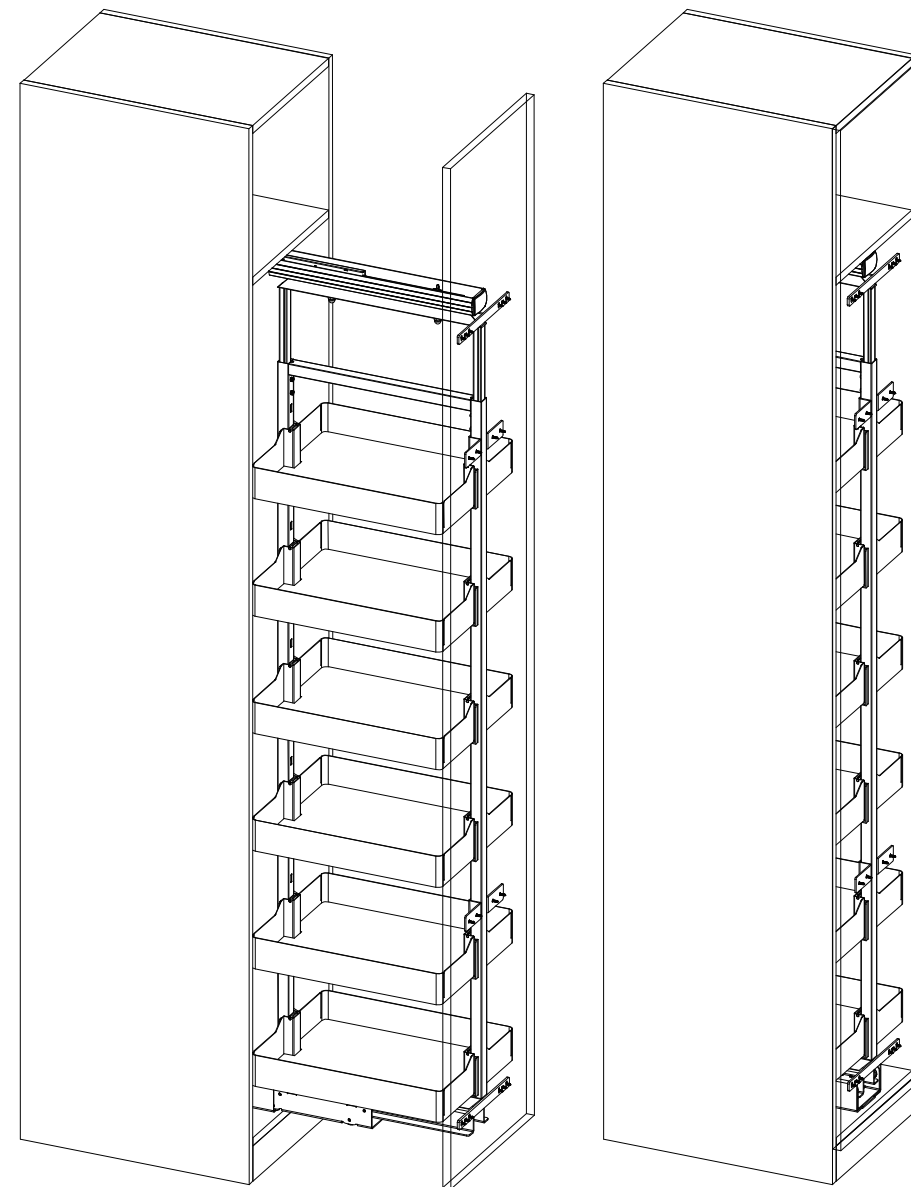

5.3 Try to push and pull the product to check whether the slides are smooth.