


**INSTALLATION INSTRUCTIONS
OF WARDROBE BASKET**

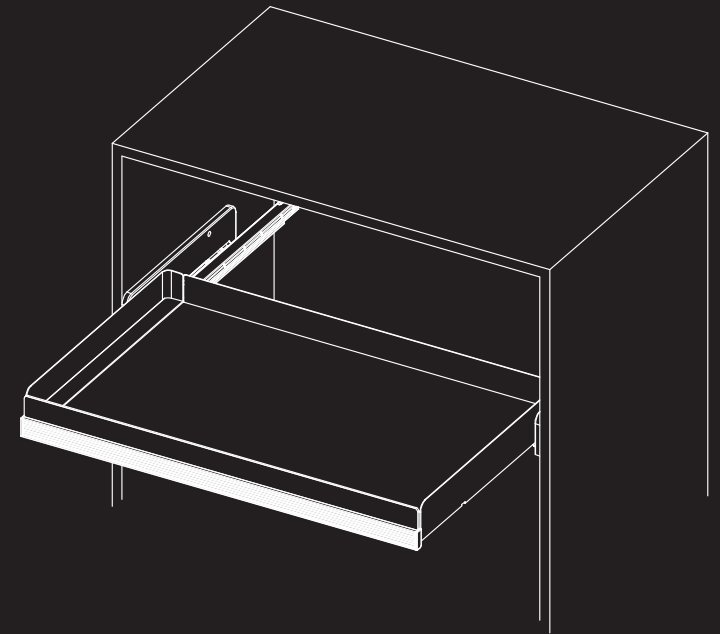


viyar


0 (800) 100 100 | viyar.eu

RELIABLE FITTINGS ARE DURABLE FURNITURE


1. Install the slides on the cabinet
(internal cabinet depth $\geq 480\text{mm}$).

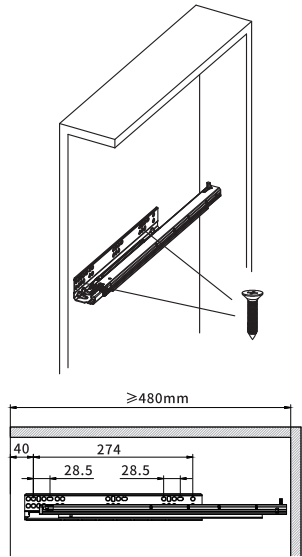


2. Slide on the side decorative covers and fix them with screws.

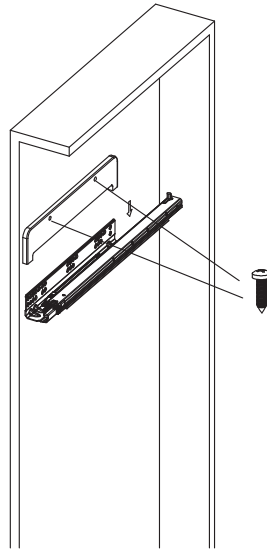

4. After the installation is complete, test the slides for smooth operation.

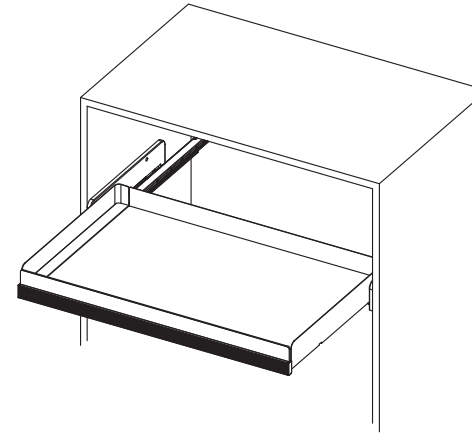

5. Disassembly of products (Hold the front of box, lift up with some strength and remove it).

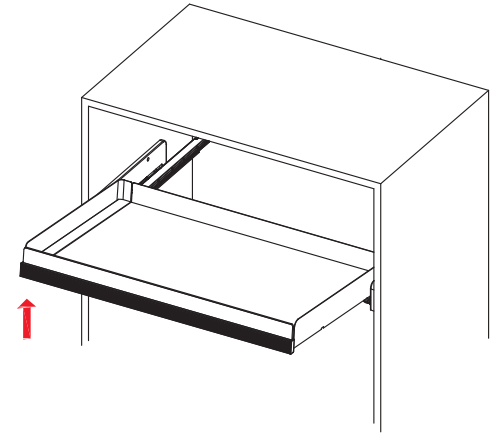


Cautions:

1. Slides not moving stably – make sure there is no sunburn drop inside the slides.
2. Slides not moving smoothly – checking if the aluminum frame size is correct, four sides of frame and slides need to be horizontal
3. The front is not even – make sure the position of the slides fixing is the same distance from front of cabinet, the rear hooks are inserted right


3.1. Pull out both slide upper rails.

3.2. Lift the box front up and align the back end with the slide.

3.3. Flatten the product and press down on it with a little force.

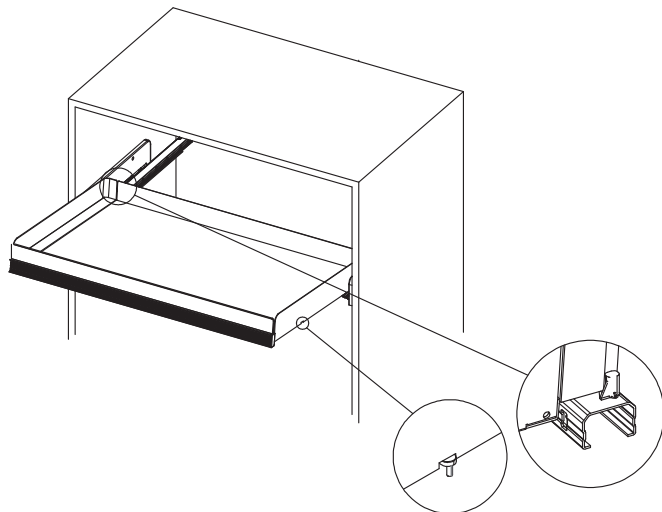

Wardrobe Basket Accessories

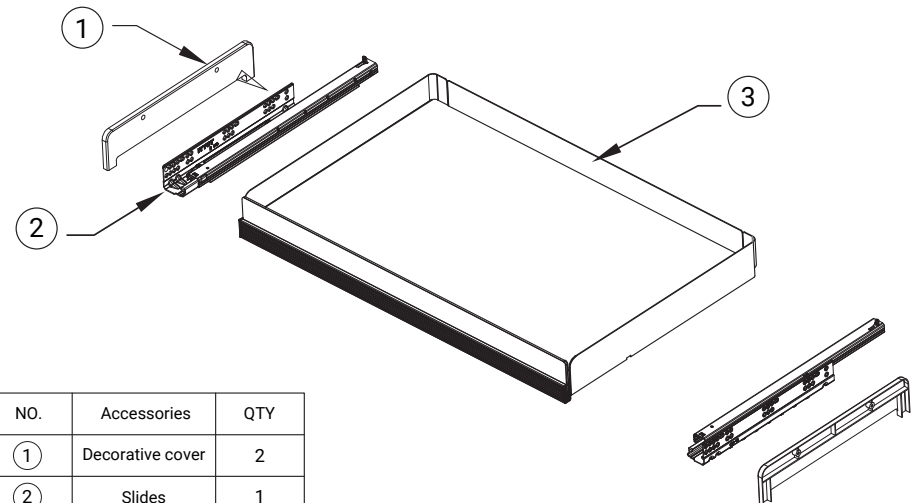

NO.	Accessories	QTY
①	Decorative cover	2
②	Slides	1
③	Basket	1