


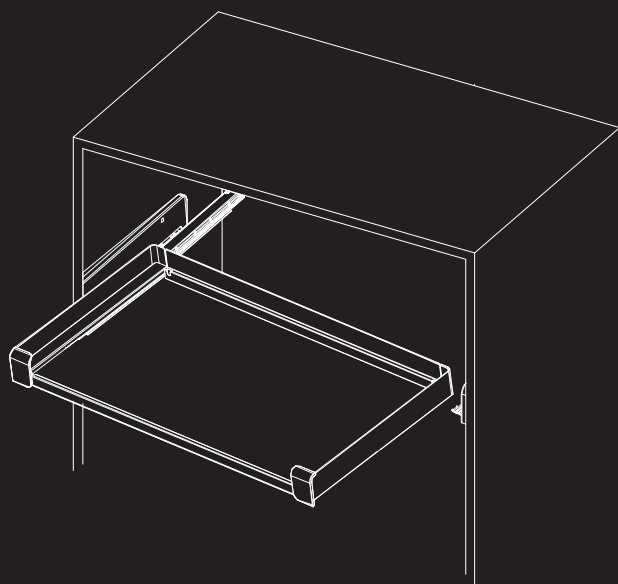


INSTRUCTION

OF SHALLOW/DEEP BASKET

RELIABLE FITTINGS ARE DURABLE FURNITURE


1.

Install the slides on the cabinet
(internal cabinet deep $\geq 480\text{mm}$)

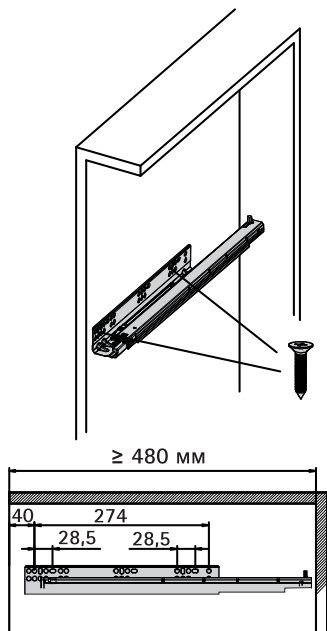


2.

Slide on the side decorative
covers and fixed with screws

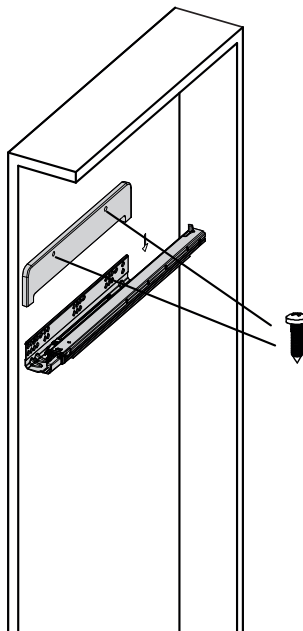

3.


1. Pull out the both slide upper rails.
2. Lift the Box front up and align the back end with the slide
3. Flatten the product and press down on the product with a little force

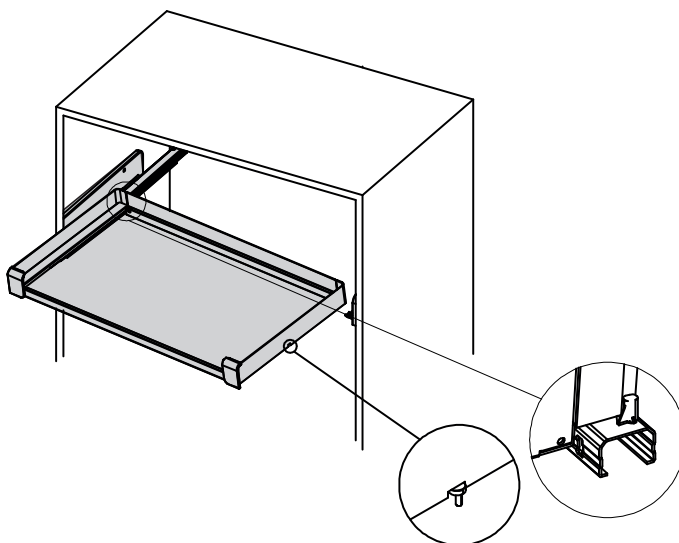

4.


4-1 Place the reinforced base pad flat within the fabric basket to provide support.

4-2 Insert the round tube into the fabric sleeves at both ends of the basket, ensuring the plastic support head remains exposed.

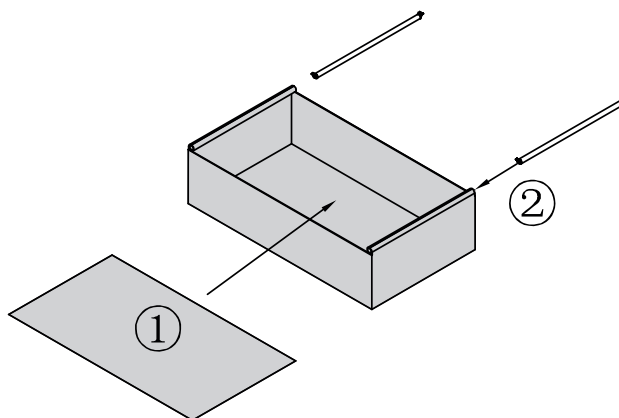

5.

Place the fabric basket into the aluminium frame, aligning the plastic components with the corresponding mounting holes for installation.

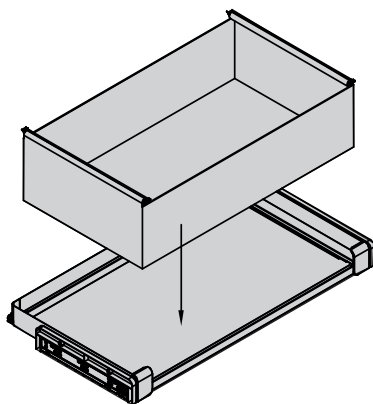

Notes:

1. Slides not moving stable.....Make sure there is no sawdust drop inside the slides.

2. Slides not moving smoothly.....checking if the aluminum frame size is correct, four sides of frame and slides need to be horizontal.

3. The front is not even...Make sure the position of the slides fixing is the same distance from front of cabinet, the rear hooks are inserted right.



0 (800) 100 100 | viyar.ua