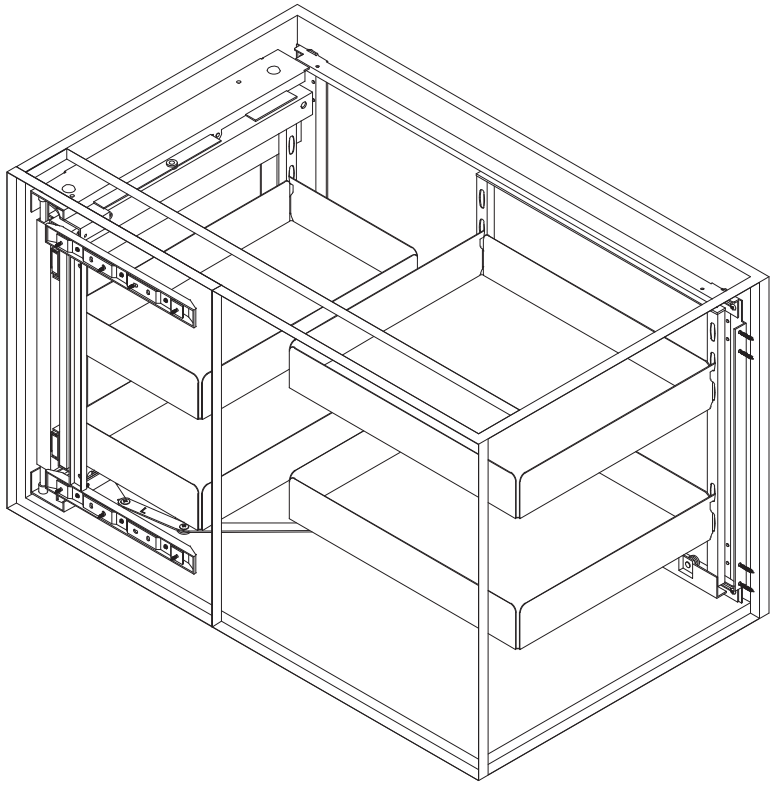
INSTALLATION INSTRUCTION
CORNER BLUEBELL NV 900 MM MULLER








viyar

0 (800) 100 100 | viyar.com


RELIABLE FITTINGS ARE DURABLE FURNITURE

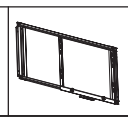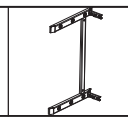KIT CONTENTS

Rear Frame		Q'ty	Swivel Arm		Q'ty	Screw M5*10		Q'ty	Washer		Q'ty	Side Frame		Q'ty
A		1set	B		1set	C		3pcs	D-1		3pcs	E		1set
									D-2		2pcs			
Door Bracket		Q'ty	Door Bracket Fittings		Q'ty	Screw M5*8		Q'ty	Screw M6*10		Q'ty	Screw M6*15		Q'ty
F		1set	G		2pcs	H		6pcs	I		4pcs	J		2pcs
door basket		Q'ty	Inside basket		Q'ty	Anti-collision		Q'ty						
K		2pcs	L		2pcs	M		1pcs						

INSTALLATION INSTRUCTIONS (LEFT OPENING DOOR)

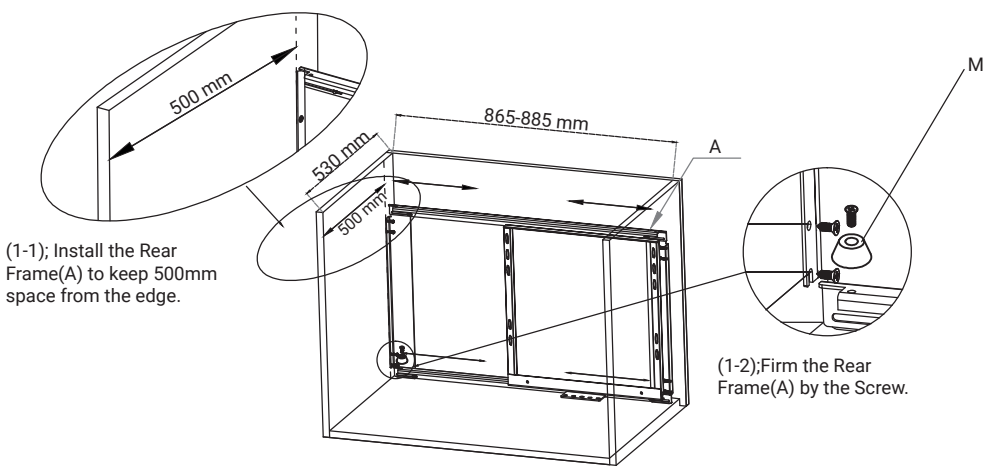
1 Fix the Rear Frame(A)



(1-1); Install the Rear Frame(A) to keep 500mm space from the edge.

(1-2);Firm the Rear Frame(A) by the Screw.

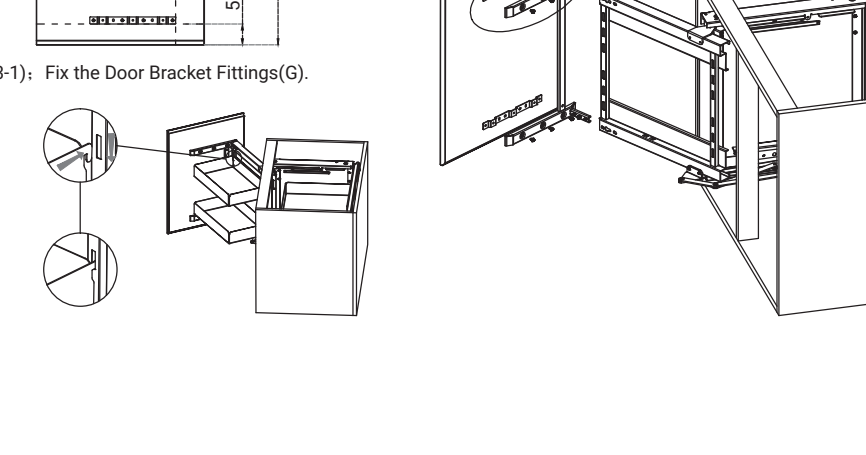2 Fix the Side Frame(E)&(B).



(2-1);Install the Side Frame(E) to keep 10mm space from edge.

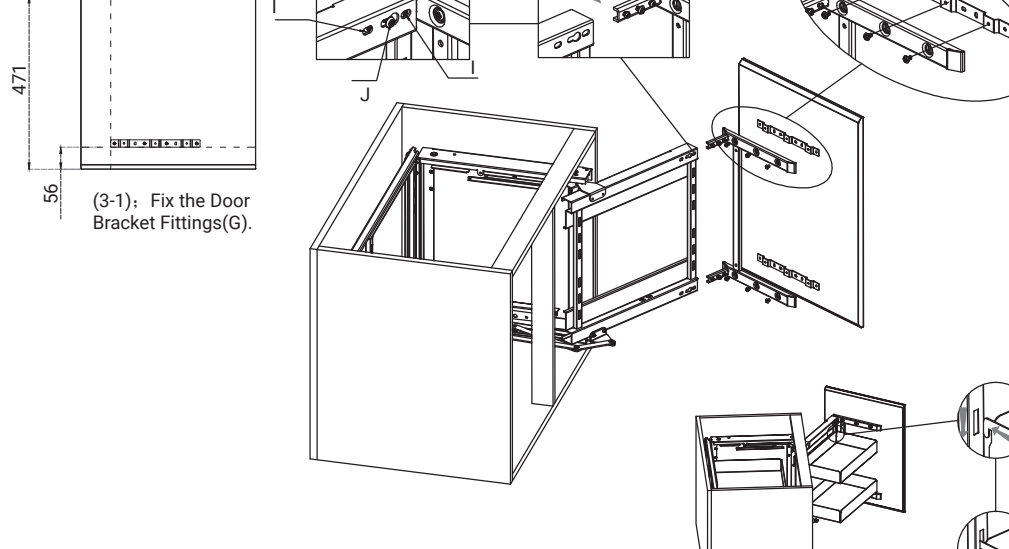
(2-2);Connect the Side Frame(E)and the Swivel Arm(B) by Screw(C)& Washer(D-1).(236 mm)

(2-3);Put the Washer(D-2) into the hole, then insert the pin.(230 mm)

3 Fix the Door Bracket(F).

(3-2)：Can adjust the door up and down by Screw(H)

(3-3)：Can adjust the door right and left by Screw(I). Should tighten up the door by Screw(J) after adjustment.



(3-1)：Fix the Door Bracket Fittings(G).

INSTALLATION INSTRUCTIONS (RIGHT OPENING DOOR)

1 Fix the Rear Frame(A)

(1-2);Firm the Rear Frame(A) by the Screw.

(1-1); Install the Rear Frame(A) to keep 500mm space from the edge.

2 Fix the Side Frame(E)&(B).

(2-1);Install the Side Frame(E) to keep 10mm space from edge.

(2-2);Connect the Side Frame(E)and the Swivel Arm(B) by Screw(C)& Washer(D-1).(236 mm)

(2-3);Put the Washer(D-2) into the hole, then insert the pin.(230 mm)

3 Fix the Door Bracket(F).

(3-3)：Can adjust the door right and left by Screw(I). Should tighten up the door by Screw(J) after adjustment.

(3-2)：Can adjust the door up and down by Screw(H)

(3-1)：Fix the Door Bracket Fittings(G).