


INSTALLATION INSTRUCTION OF SWING OUT BASKET

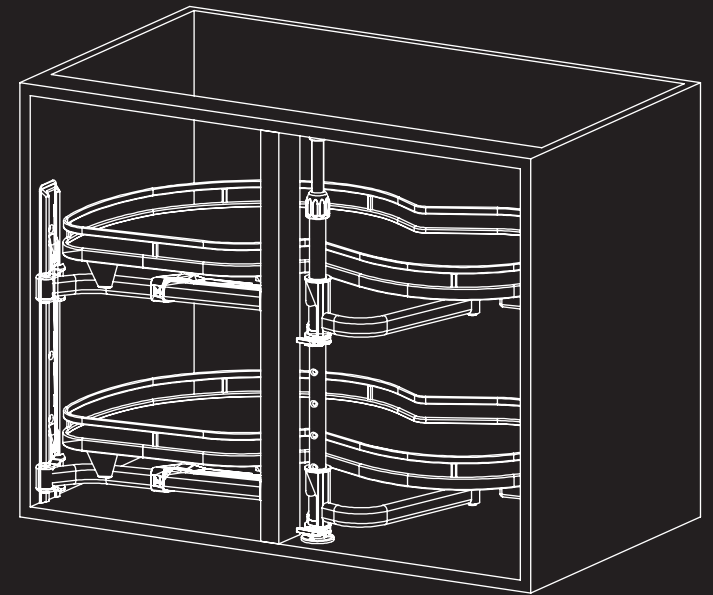


viyar

sales@viyar.com | viyar.com






RELIABLE FITTINGS ARE DURABLE FURNITURE

Note:

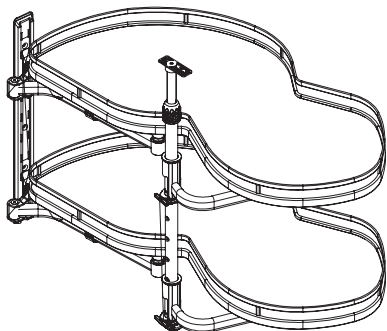


1. Please read this instruction carefully before install.
2. For cabinet width 900mm, inner height more than 600mm.
3. This instruction is for left side, right side is symmetrical.

Accessories

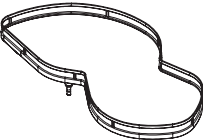Upper fixed plastic parts	Lower fixed plastic parts	Connecting column	Sleeve
A1 pcs 	B1 pcs 	C1 pcs 	D2 pcs 
Countersunk head self-tapping screws	Round head self-tapping screw	Rear support arm	Front support arm
E5 pcs 	F10 pcs 	G2 pcs 	H2 pcs 
Decorative cover	Mounting plate for forearm		Basket
I2 pcs 	J1 pcs 		K2 pcs 


Installation Instruction

Specification and suitable cabinet size (Door opening angle $\geq 90^\circ$)

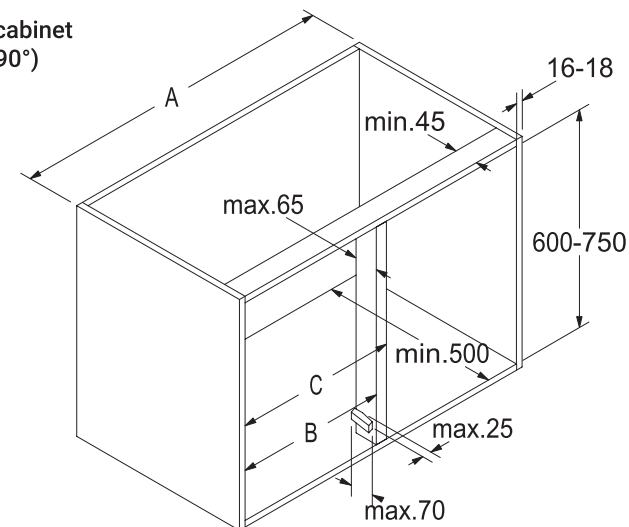


1. Punch holes as the drawing

Door W	Size	A	B	C
450		900	411 - 418	Max 450

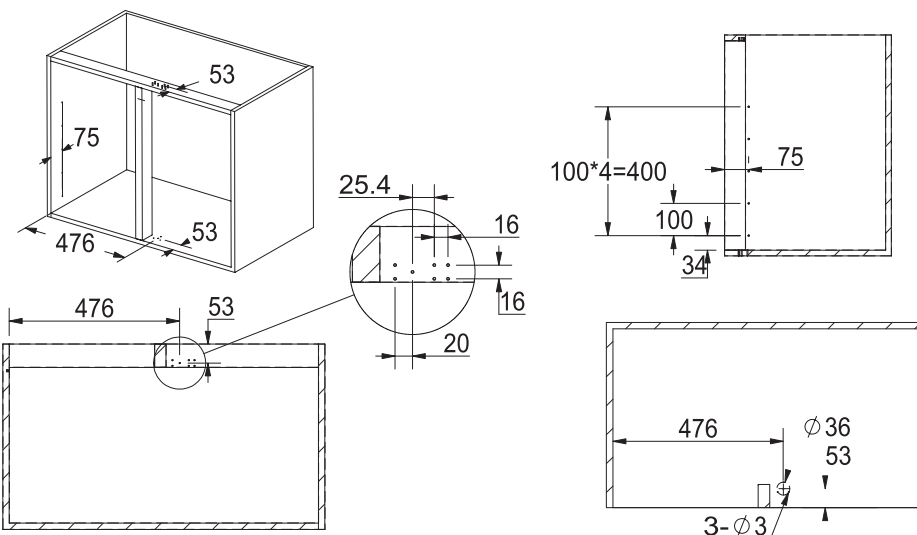


Installation Instruction

2. Fixing parts 'J' with screw 'E', fixing parts 'A' to top and 'B' to bottom with screw 'F'.

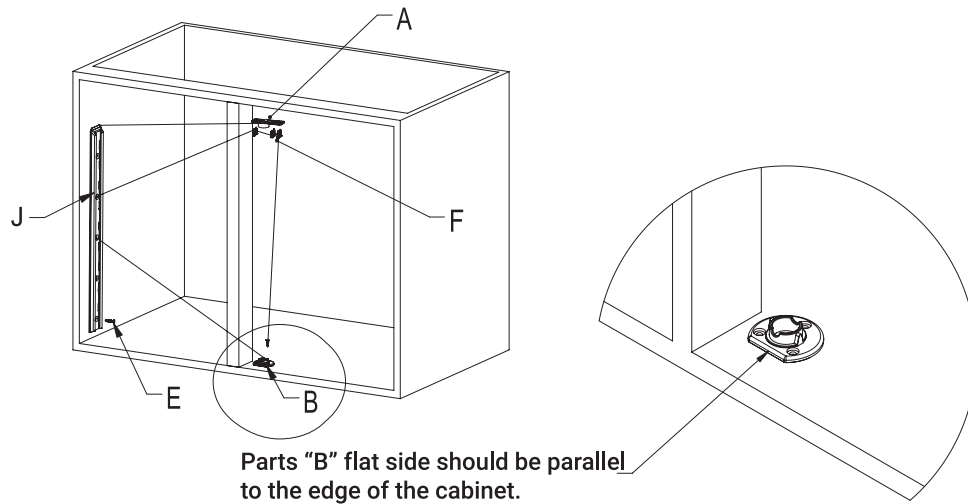


3. Fixing Parts 'D' into Parts 'C' then insert it into parts 'B'. Adjusting Part 'C' to suitable height and lock it.

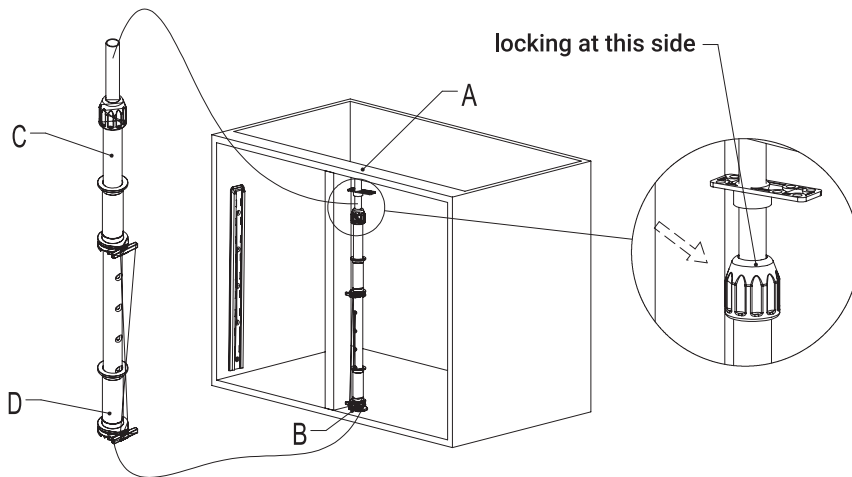

Installation Instruction

4. Put parts 'I' into 'H', then mounted into parts 'J', part 'G' mount into part 'D'. Install the basket 'K' as drawing.

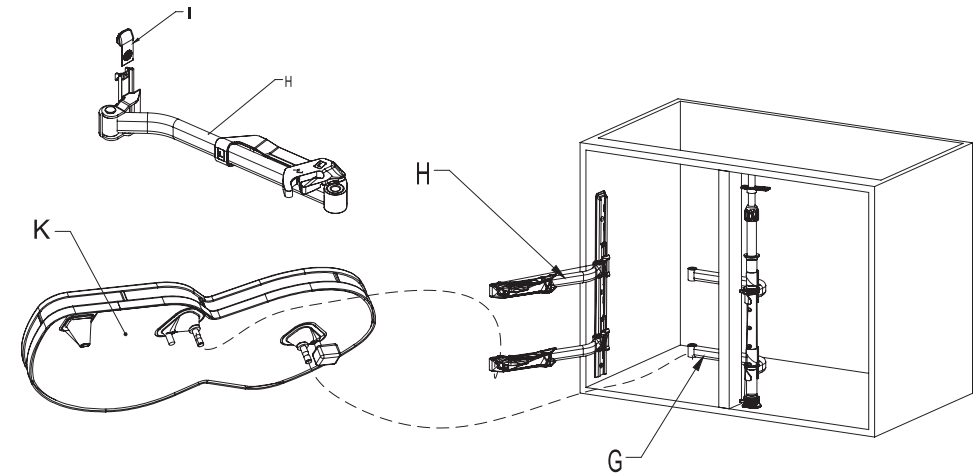

5. Installation completed.

