



FOXYDRY MINI

Made in Italy

ENG

foxydry®



INSTALLATION VIDEO

FOXYDRY MINI

ASSEMBLY INSTRUCTIONS

TOOLS NEEDED



■ Measure tape



■ Ladder



■ Pencil



■ Drill



■ Star screwdriver

WARNINGS

COMETA S.r.l. shall not be liable or responsible for any personal injuries or damages to property caused by improper use of FOXYDRY



FOXYDRY is a space-saving clothes drying rack / airer. It is not a toy. This product is not suitable for children. Small parts of FOXYDRY can be easily swallowed.



FOXYDRY MINI weighs 4.5 kg and is designed to carry a maximum load of 10 kg.

ATTENTION!! Never exceed the stated load limit, as it could be dangerous and result in personal injuries or damages to property.



We recommend that FOXYDRY is assembled and installed by qualified and experienced personnel.

ATTENTION!! Make sure that FOXYDRY has been mounted correctly to the wall before completing assembly.

IMPORTANT!! Therefore, make sure that the plugs supplied with your clothes drying rack / airer are suitable for the material of your ceiling. If the plugs supplied with the product are not suitable for your ceiling, use suitable plugs instead.


COMETA S.r.l. shall not be liable or responsible for personal injuries or damages to property caused by improper installation of FOXYDRY.




ATTENTION!! When FOXYDRY MINI is not in use, do not forget to pull up the beaded chain and secure it with the lock clip to keep it out of the reach of children.

CONTENTS OF THE BOX

A

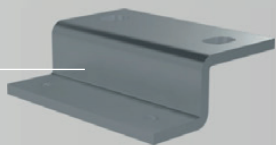


B

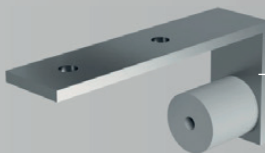

■ 2 ceiling brackets (S Bracket - L Bracket)

C

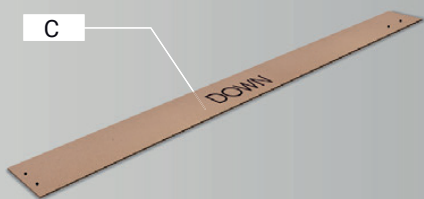

■ Cardboard template

D




■ Clutch holder

E



■ Central structure


F

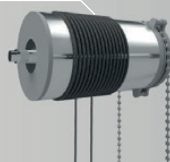


G



■ Clutch + Clip

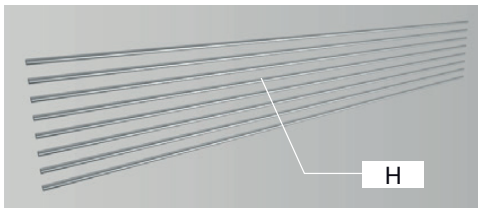


■ 8 drying rails

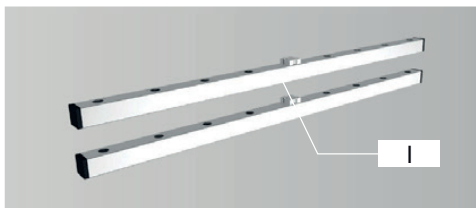


■ 2 square side rails



■ Bag 1: 16 M6x16 screws

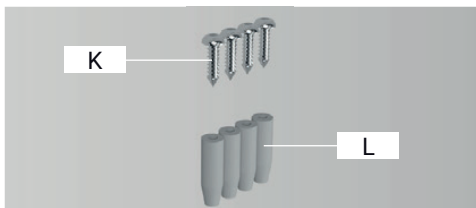


■ Bag 2: 4 wall plugs + 4 screws

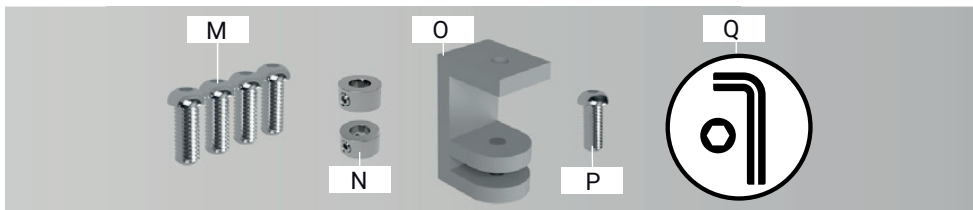

■ Bag 3: 4 M5 screws and 1 M4, 2 round cord locks, 1 diverter, Allen keys

MAXIMUM SPACE OCCUPIED


OPEN

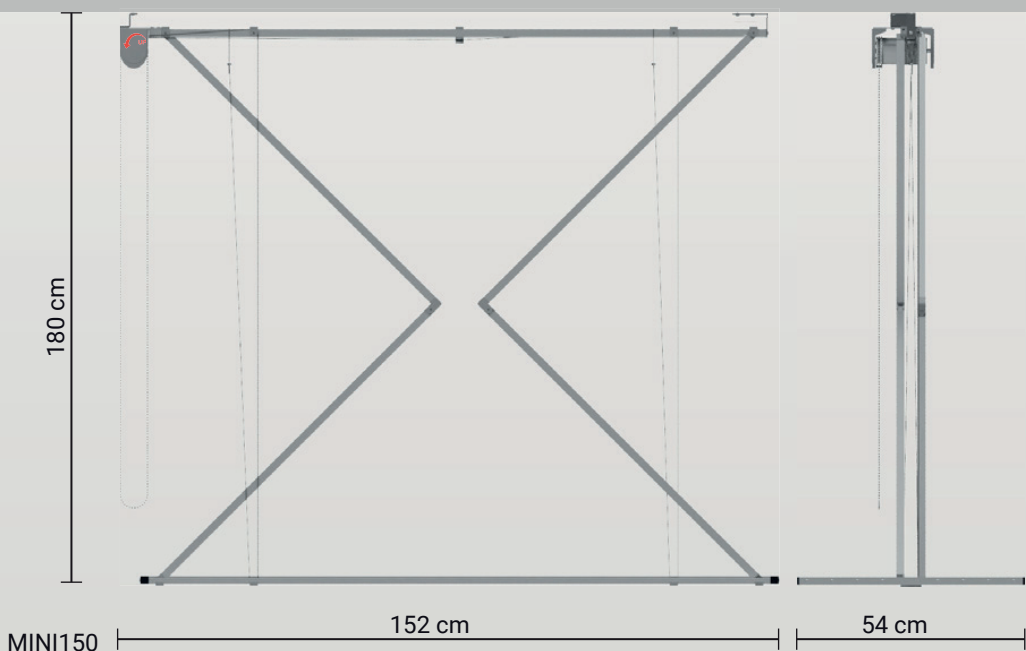

CLOSED




CEILING HOLES

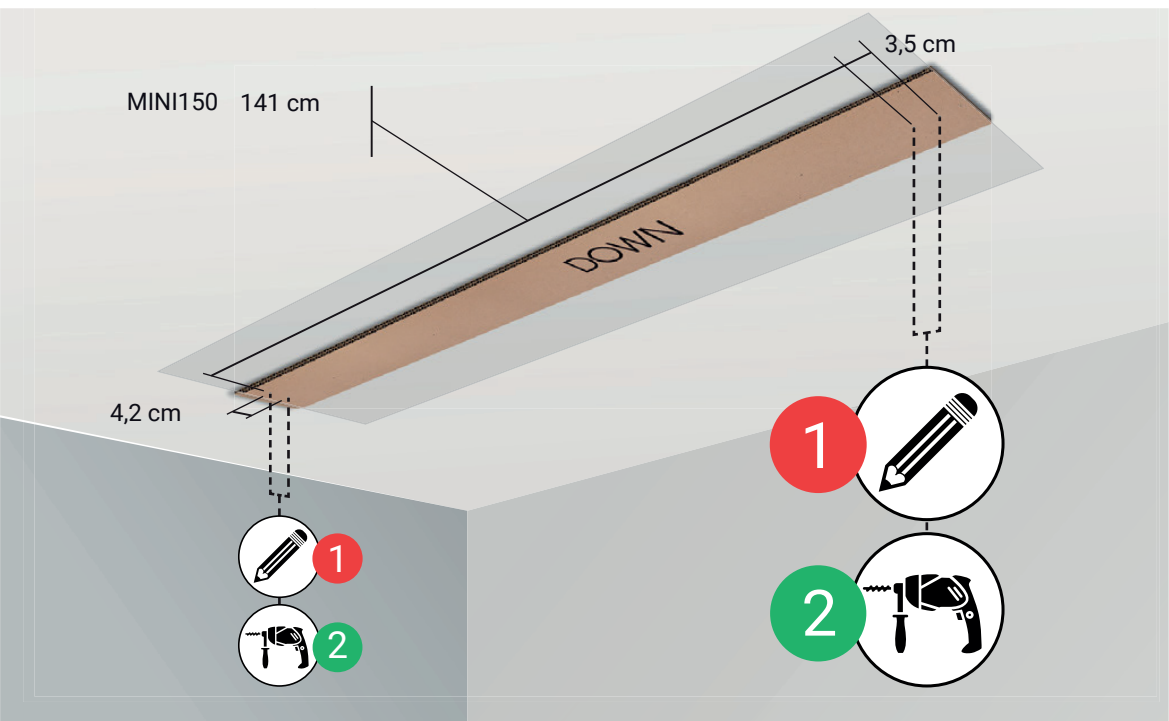


- Use the template to mark the positions of the 4 ceiling holes, then drill them.

ATTACHING THE BRACKETS TO THE CEILING

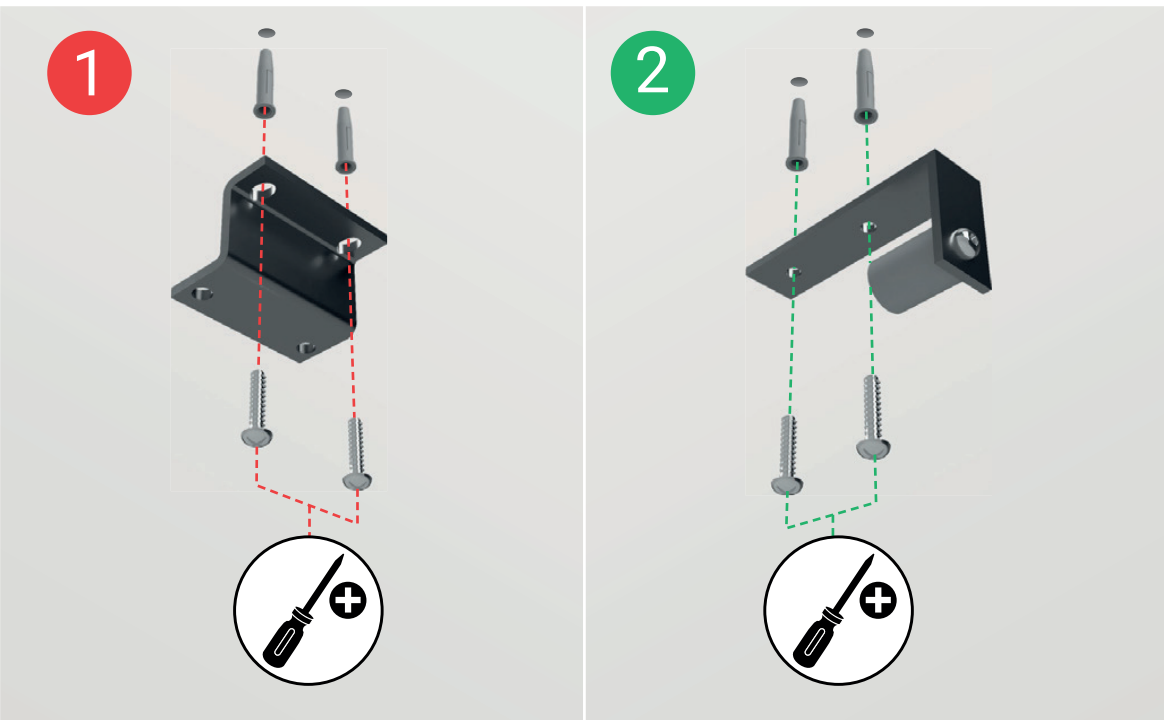


- Insert the 4 plastic wall plugs and attach the 2 brackets to the ceiling with the screws provided (see photo).

ATTACHING THE CLUTCH HOLDER

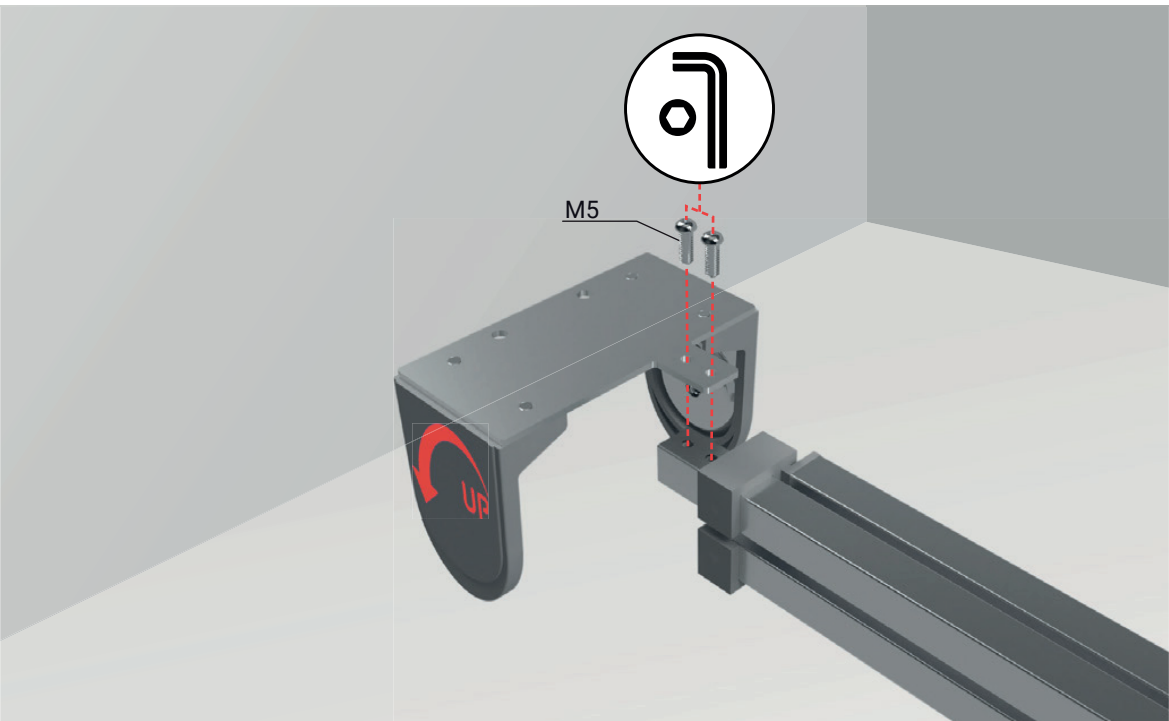


- Attach the clutch holder to the central structure of the drying rack with the screws provided (see photo).

ATTACHING THE CENTRAL STRUCTURE

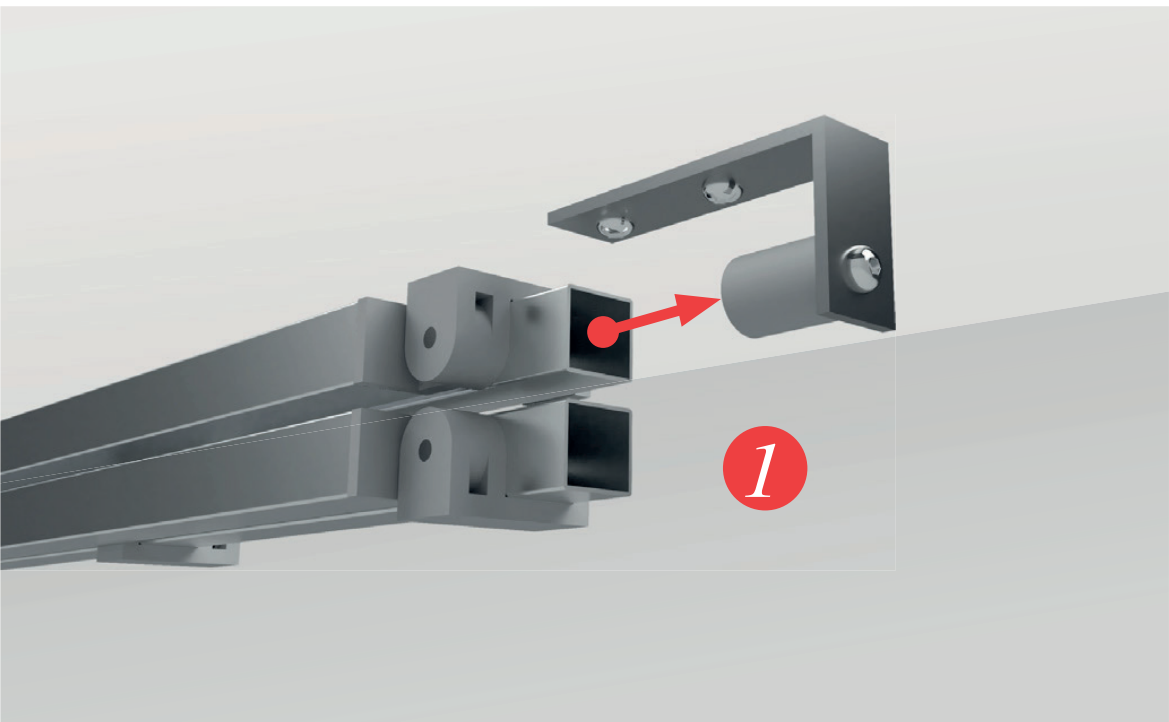


■ Attach the central structure of the drying rack to the ceiling brackets:

- 1 Slot the upper square tube onto the L bracket with a cylinder
- 2 Screw the clutch holder onto the S bracket

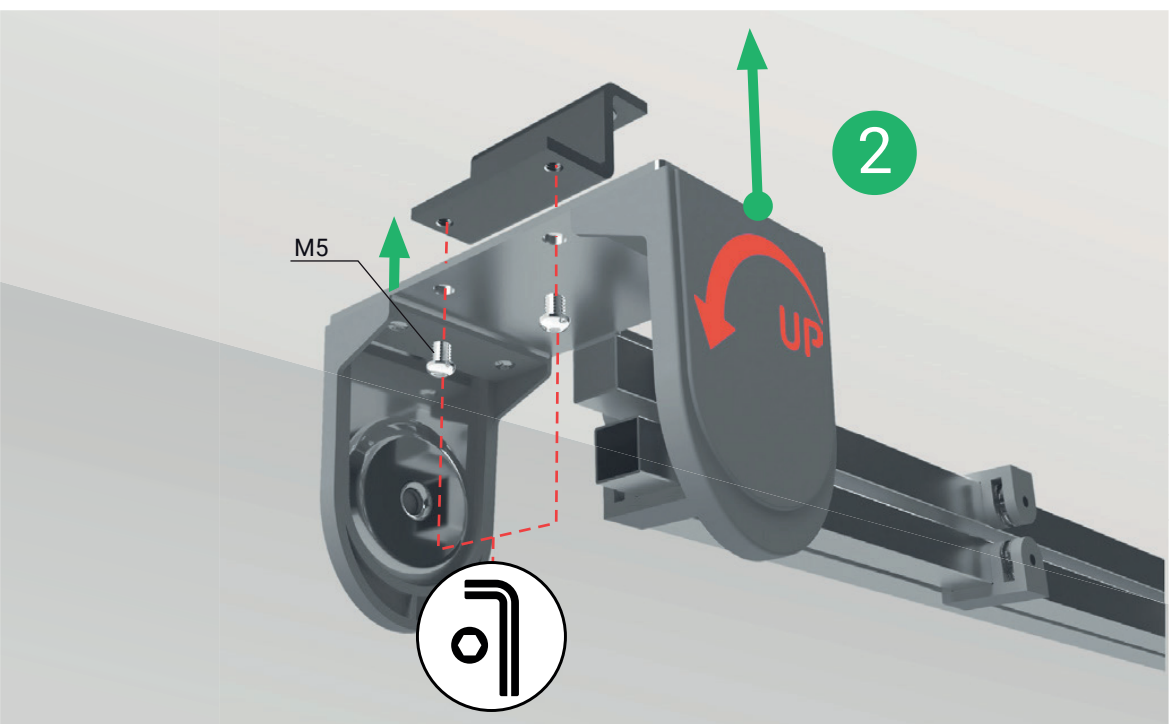

- **WARNING!** Ensure that the Foxydry MINI central structure is securely fastened to the ceiling before completing the assembly process.


CONNECTING THE CLUTCH

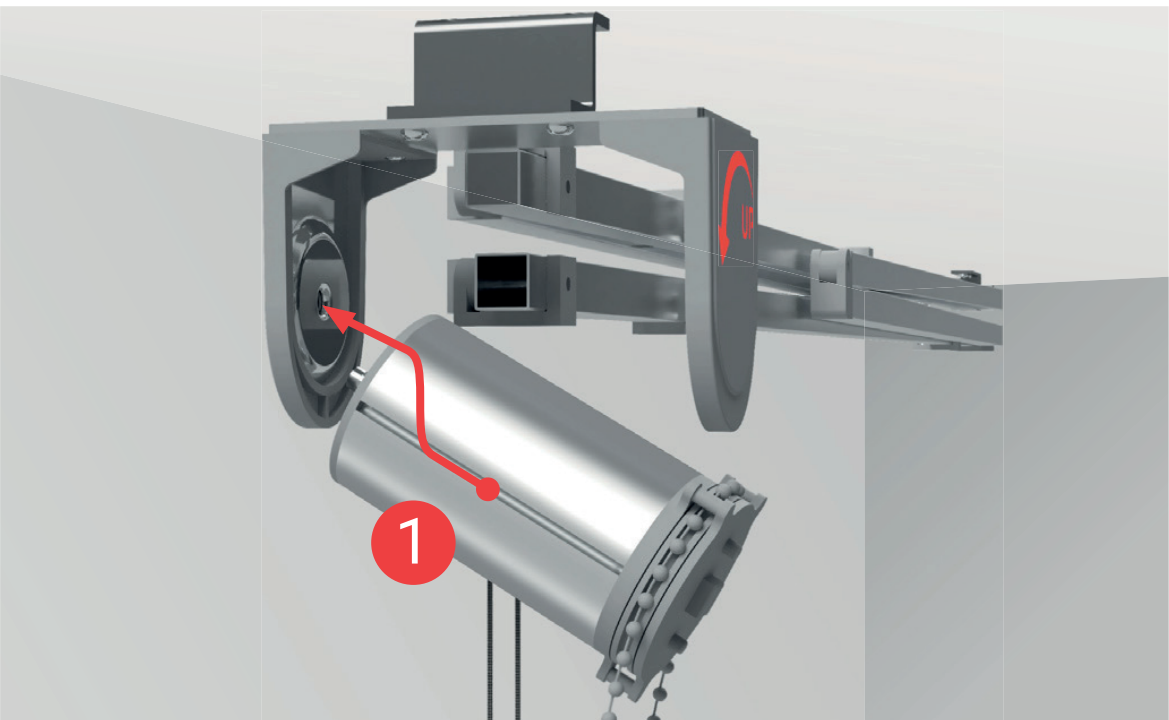

1 Put the clutch in the clutch holder. Ensure that it clips in properly (see photo).




WARNING! Ensure that the clutch is securely fastened in the clutch holder before completing the assembly process.

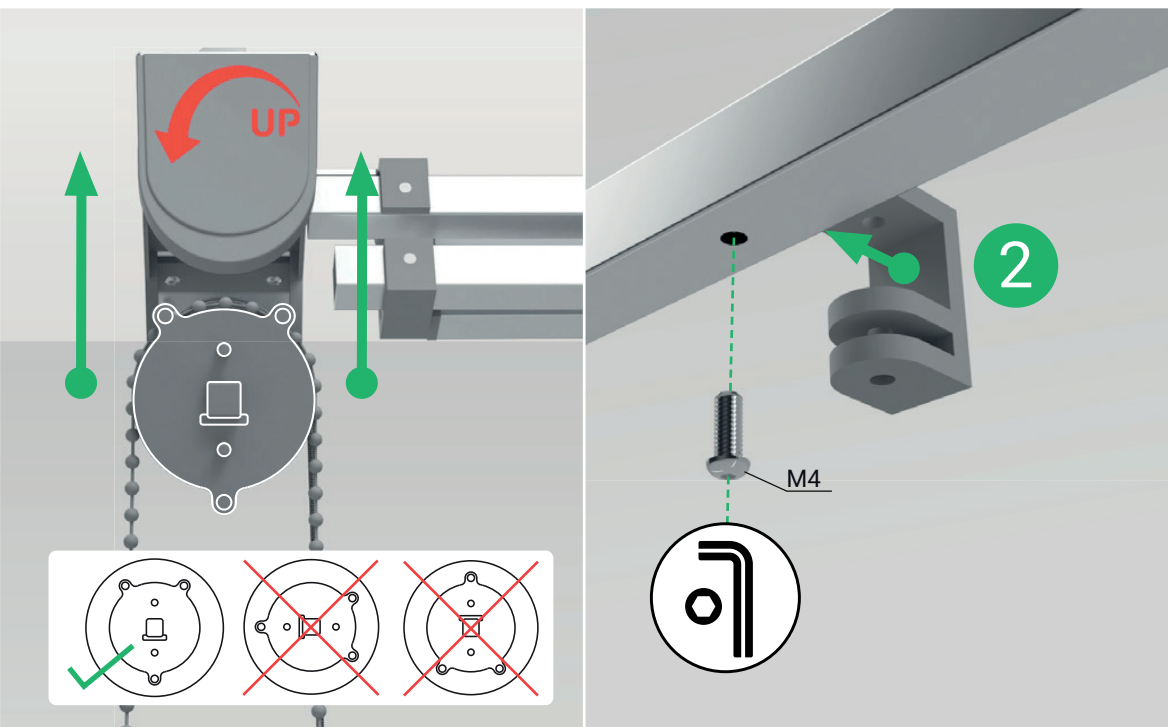

- 2 Cut off the plastic strap and attach the diverter to the centre of the upper square tube.

CORD CIRCUIT




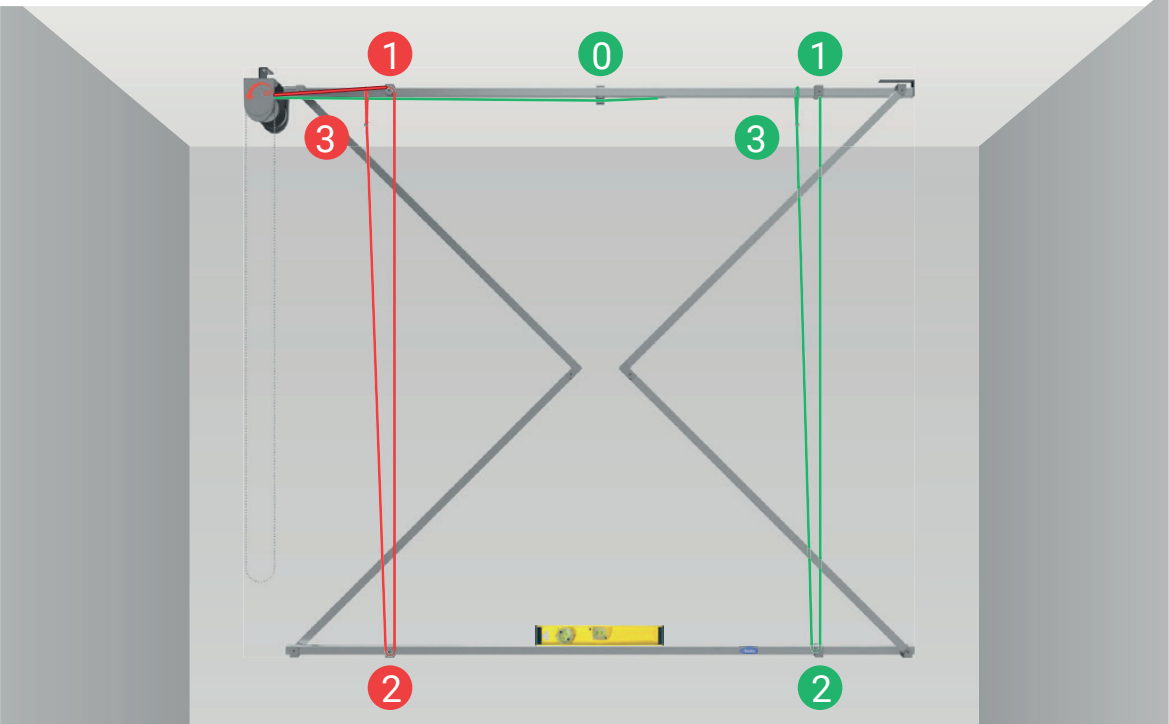


Feed the 2-cord circuit through it (see photo).

Feed the long cord in the diverter pin.


Secure the ends of the cords with the round cord locks on the upper square tube.

Adjust the length of the cords so that the drying rack is level.

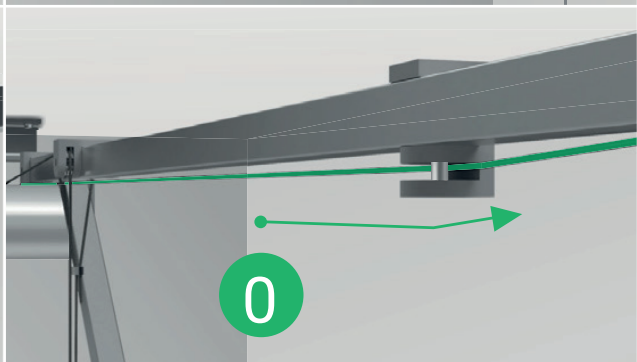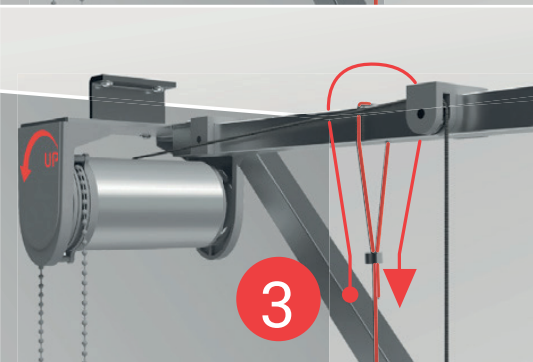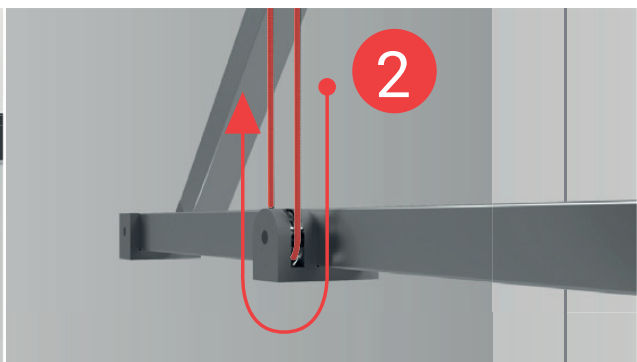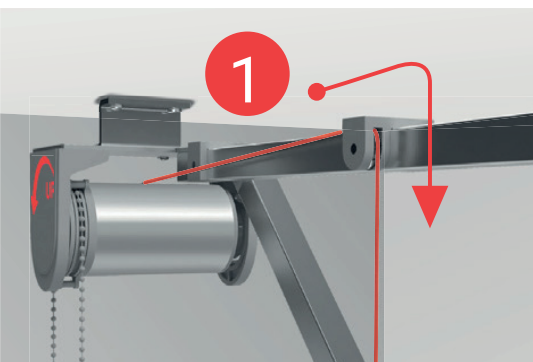


■ **WARNING!** At the lowest point, the arms should remain folded inwards slightly.

ASSEMBLING THE DRYING RACK

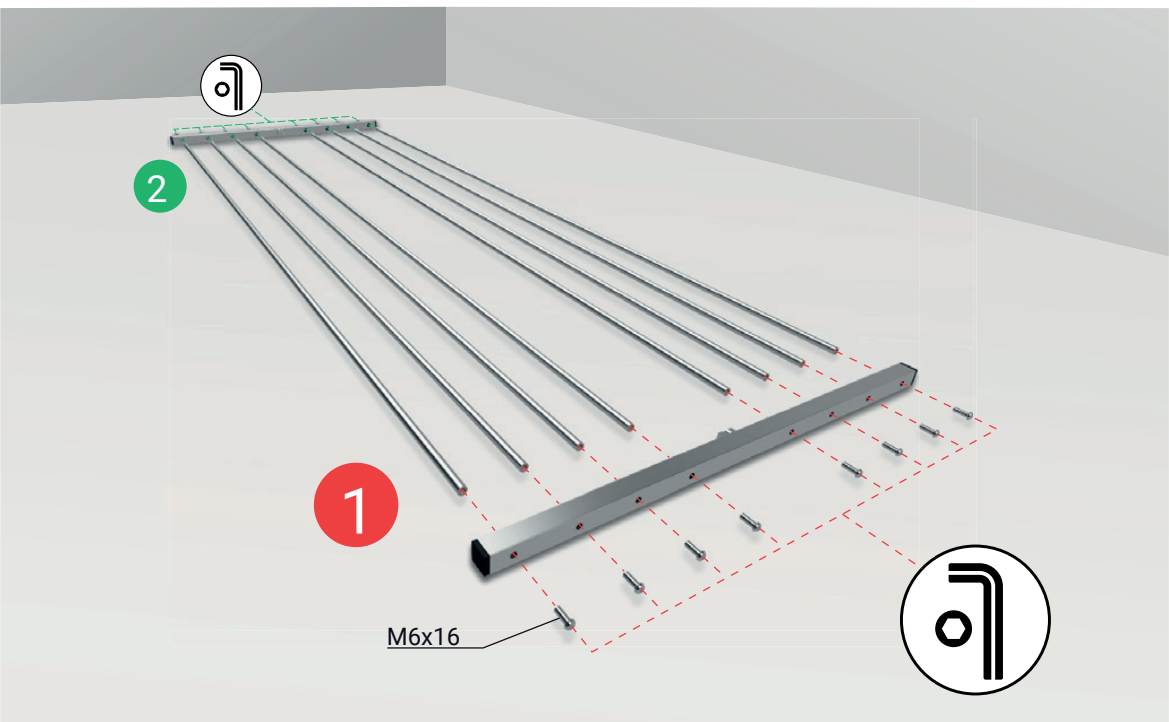


Assemble the drying grid as in the photo, leaving the screws loose.

- Attach the drying grid to the central structure of the rack and put the screws in place.

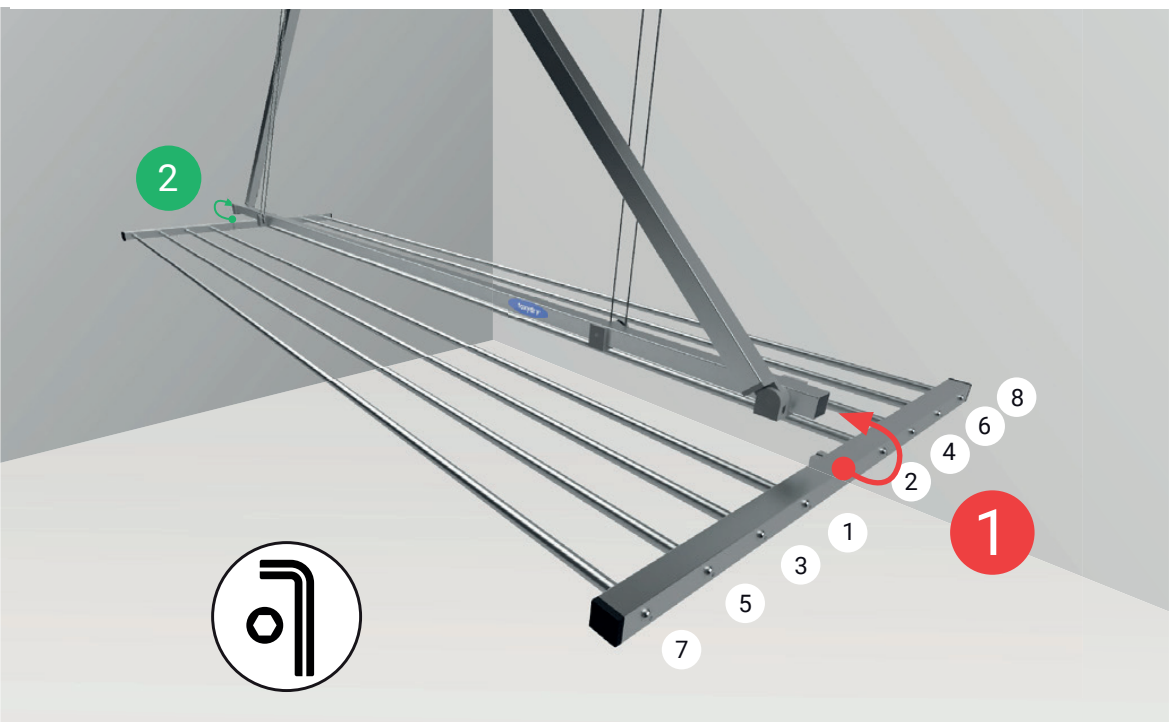


- Use the Allen key to tighten the screws firmly but not excessively (or it may cause unnecessary bending in the tubes).

INSTRUCTIONS FOR USE

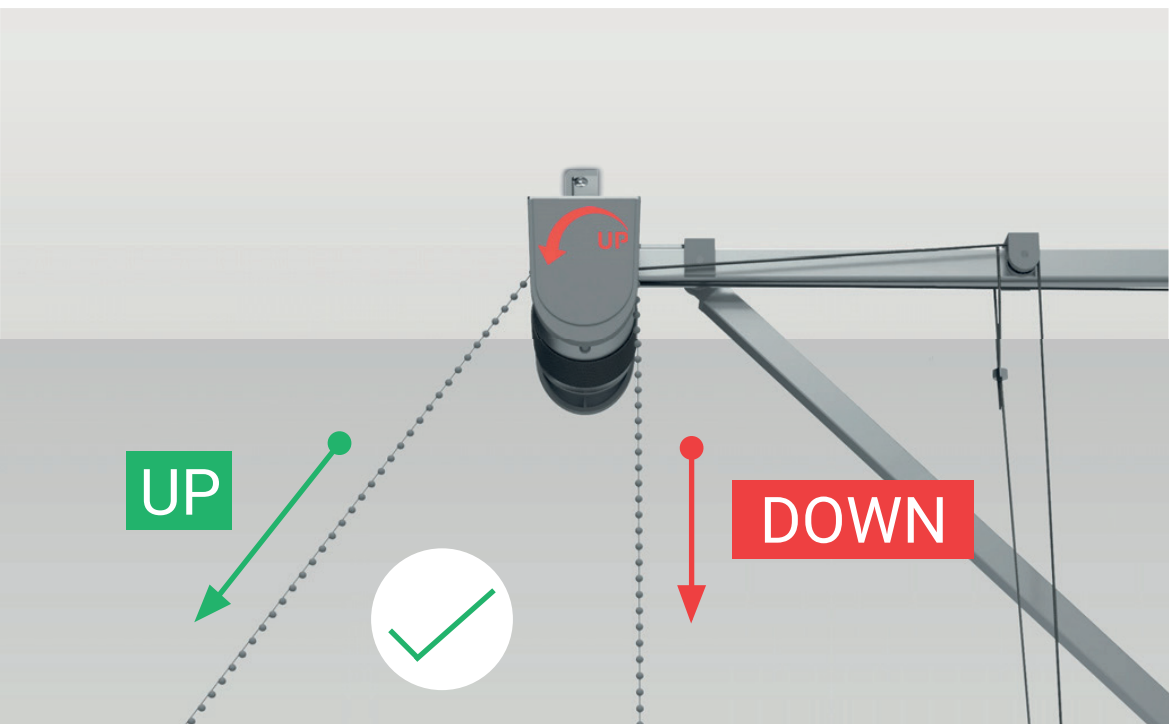


- Pull the outer part of the chain to lift the drying rack up to approximately 20 cm from the ceiling.

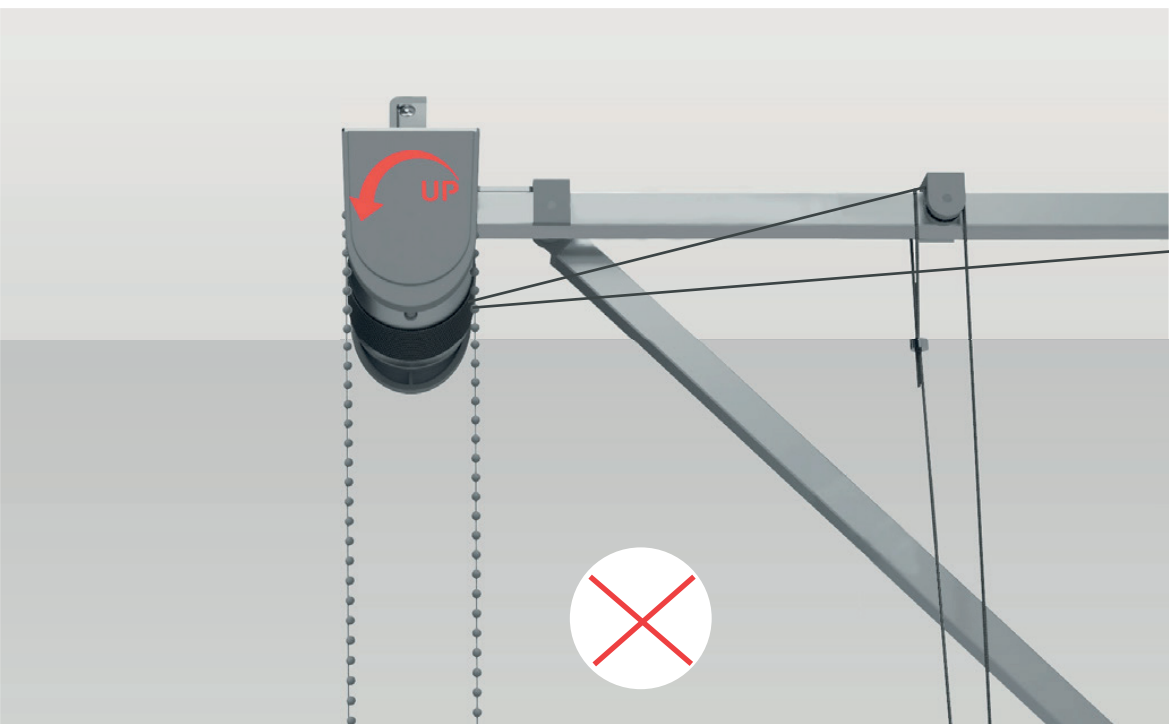

- **WARNING!** Ensure that the cords do not wind up in the wrong direction on the clutch (see photo).

SAFETY CLIP

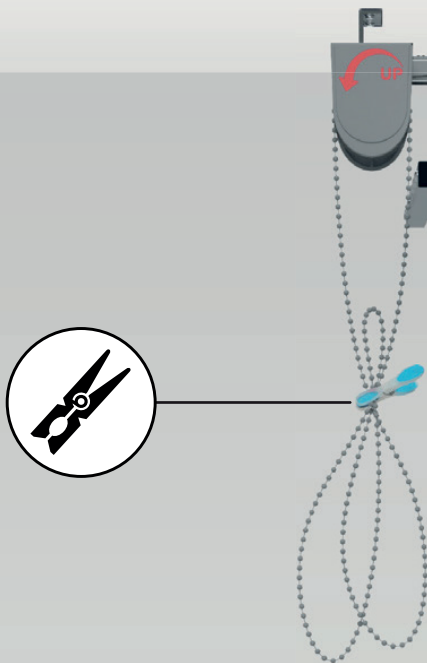

- **WARNING!** When Foxydry MINI is not in use, lift the chain up out of the reach of children with the clip.

foxydry®

viyar

 0 (800) 100 100

 office@viyar.ua

 viyar.ua