

Gola profiles
technical information

Horizontal Gola profiles




Under TOP
Gola profile
8006
8044

Gola profile
for drawers
8007
8045


Horizontal Under TOP profiles 8006 & 8044

Profile dimensions 27,2 mm x 56,5 mm

8006

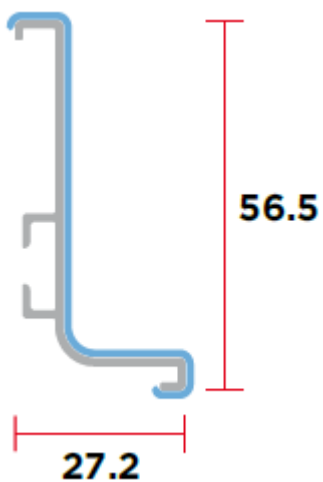

8044

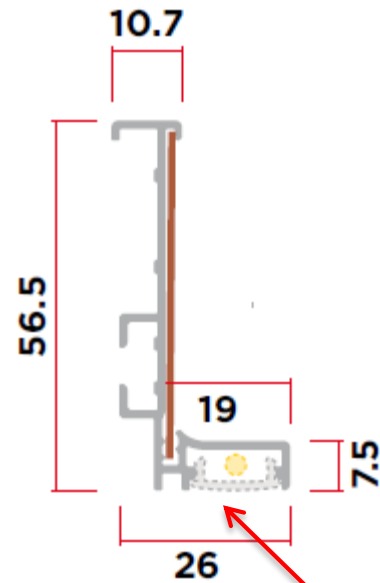


LED PROFILE



RI08090201L41

Horizontal Under TOP profiles 8006 & 8044


Fitting explanation

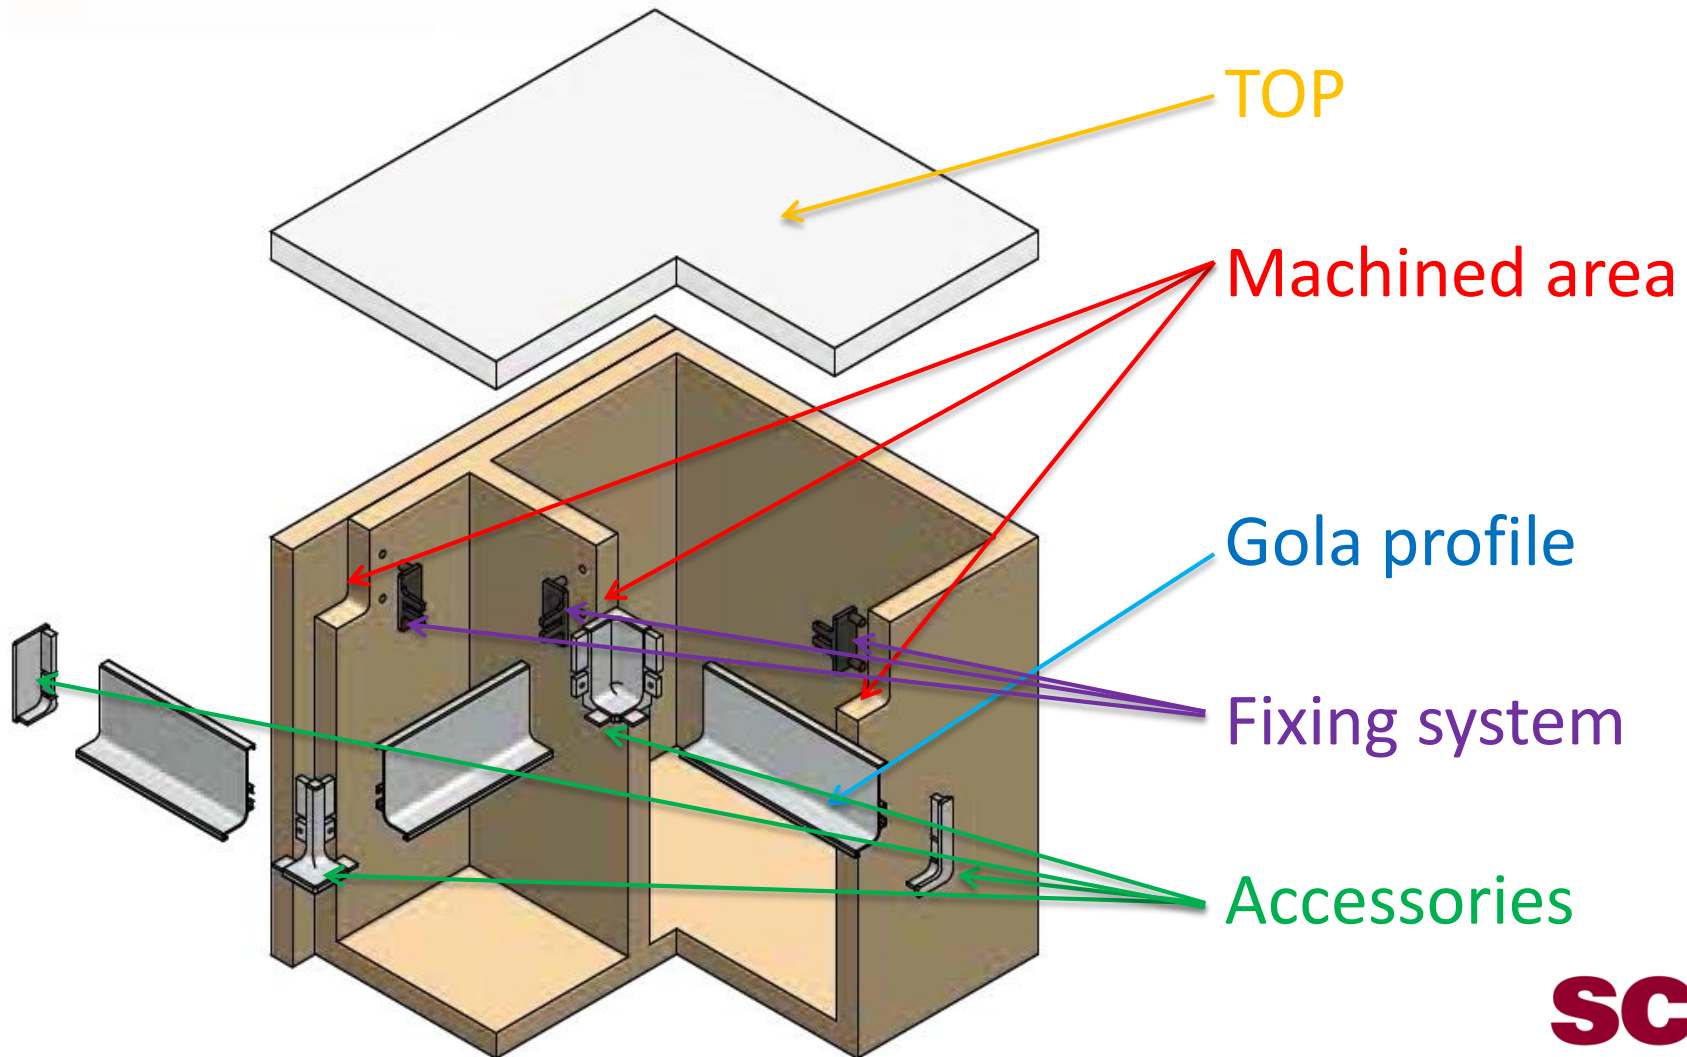

Horizontal Under TOP profiles 8006 & 8044

Machining of the cabinet


Machined Area on the side panel 26 mm x 57,5 mm

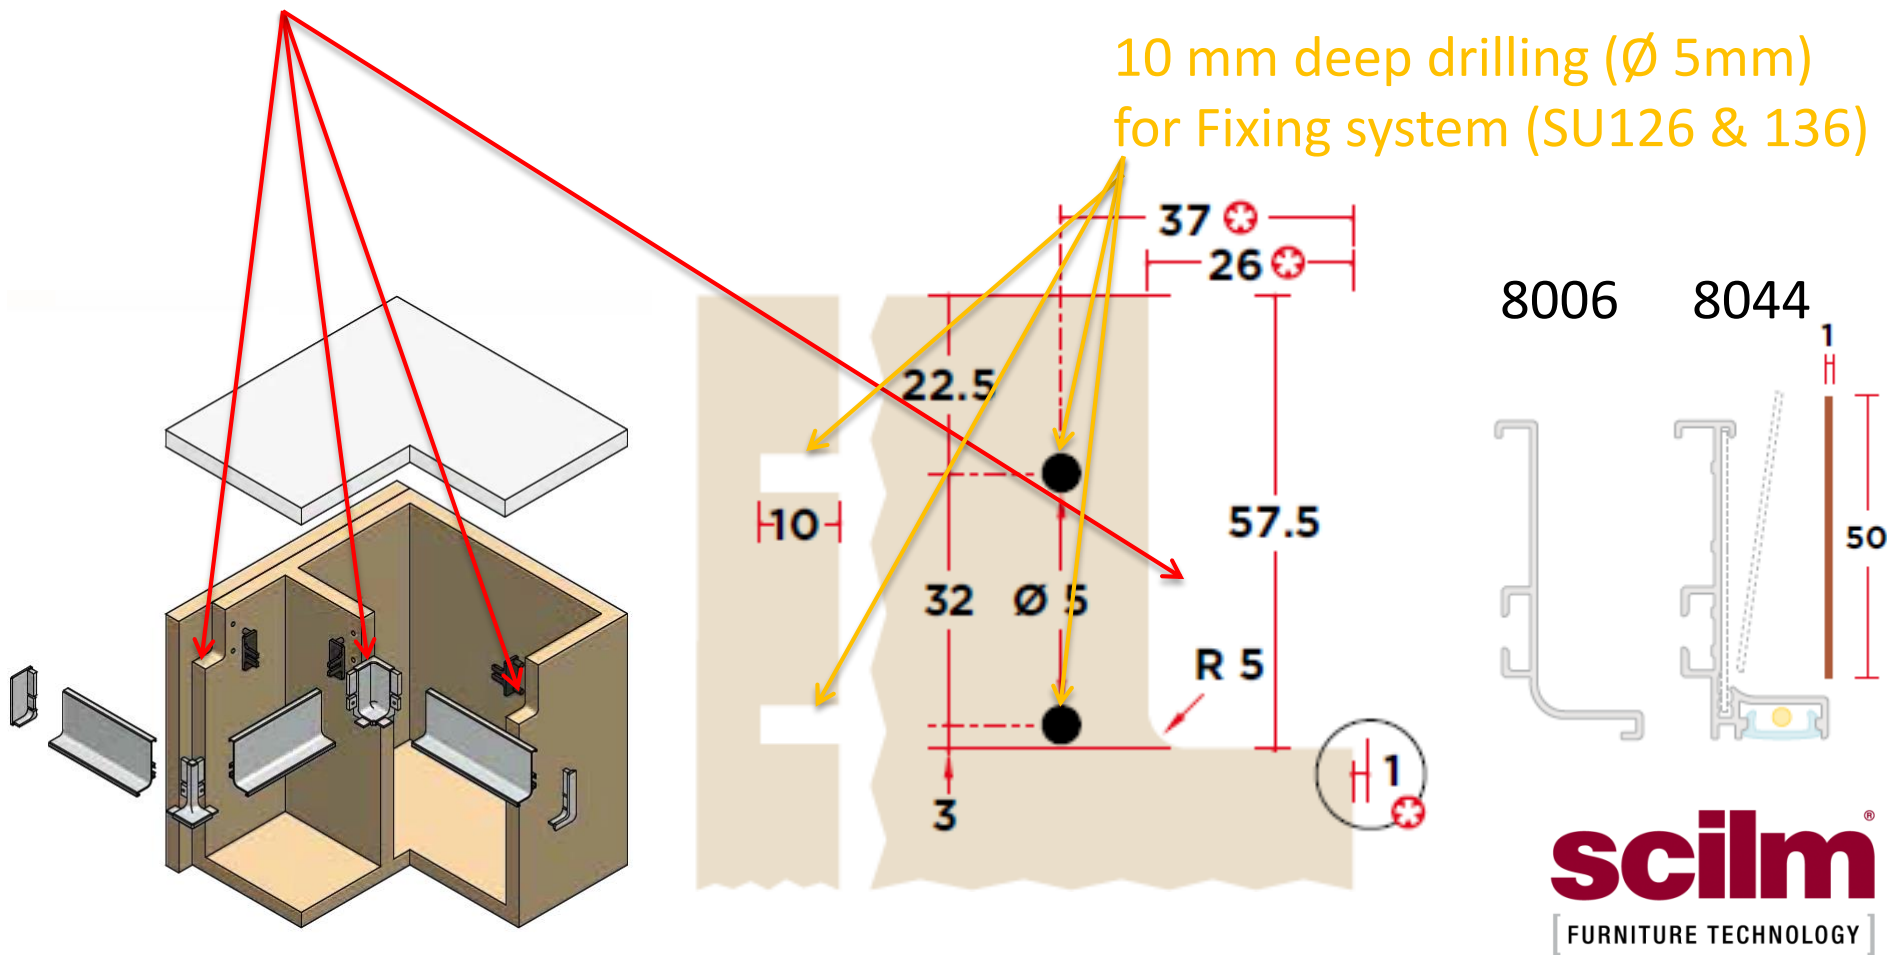

Horizontal Under TOP profiles 8006 & 8044

Machining of the cabinet

Drilling distance for fixing holes (SU126 & 136)

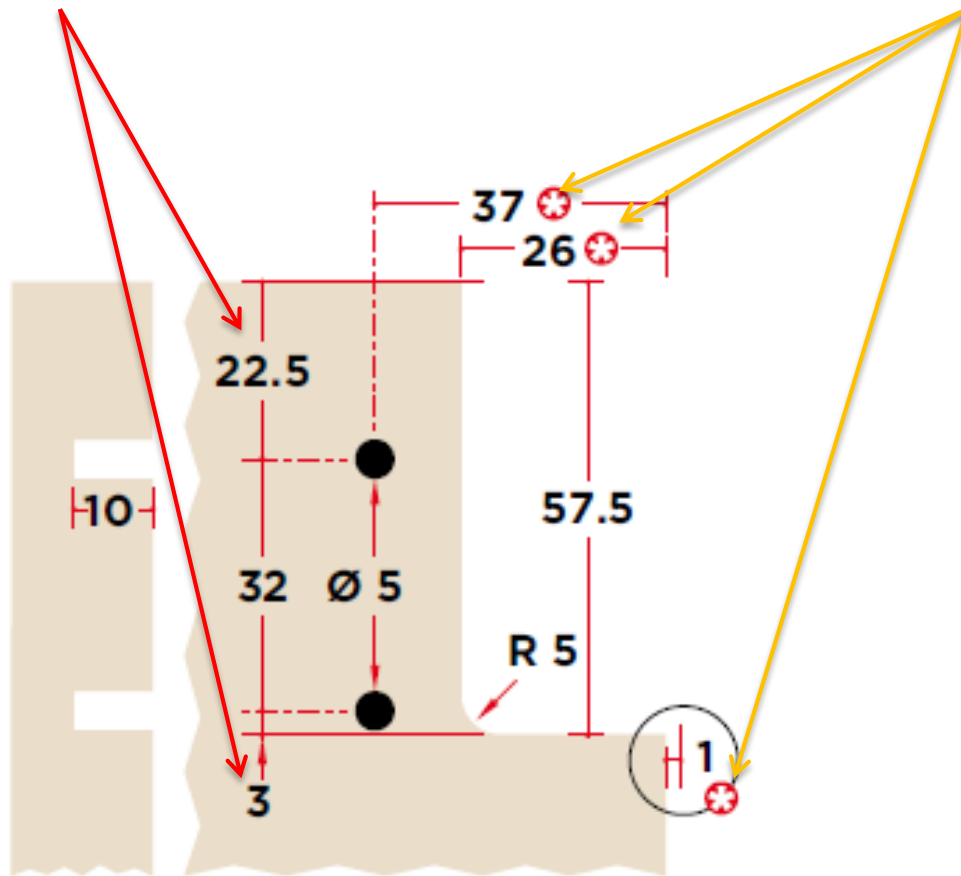


Quoted dimensions consider that Gola Profile will overcome the side of the cabinet by 1 mm.

If Gola Profile has to be flush with the cabinet sides, then the quoted dimensions has to be increased by 1 mm.


Horizontal profiles for drawers 8007 & 8045

Profile dimensions 26 mm x 73 mm

8007

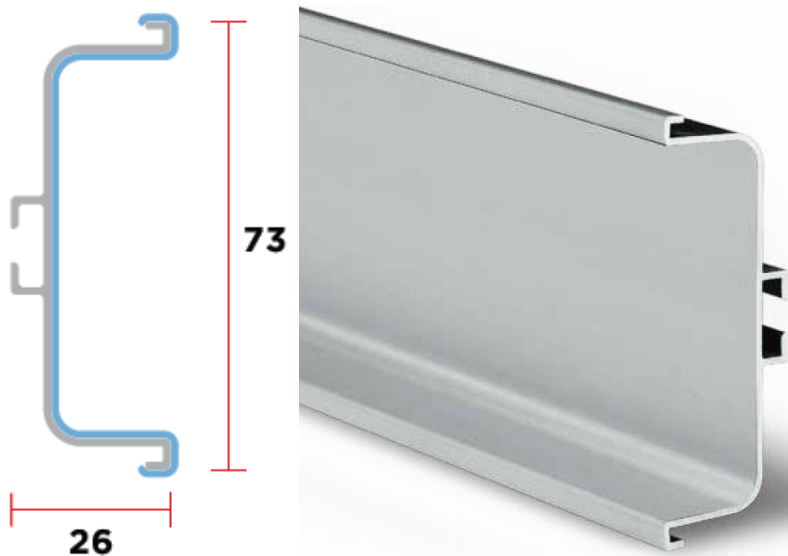

8045

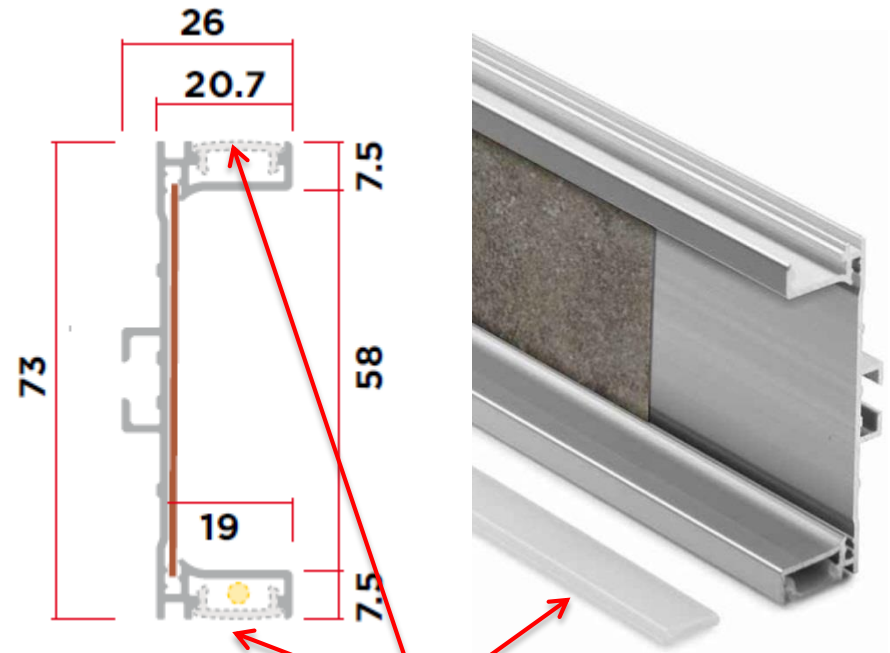


LED PROFILE



RI08090201L41

Horizontal profiles for drawers 8007 & 8045


Fitting explanation

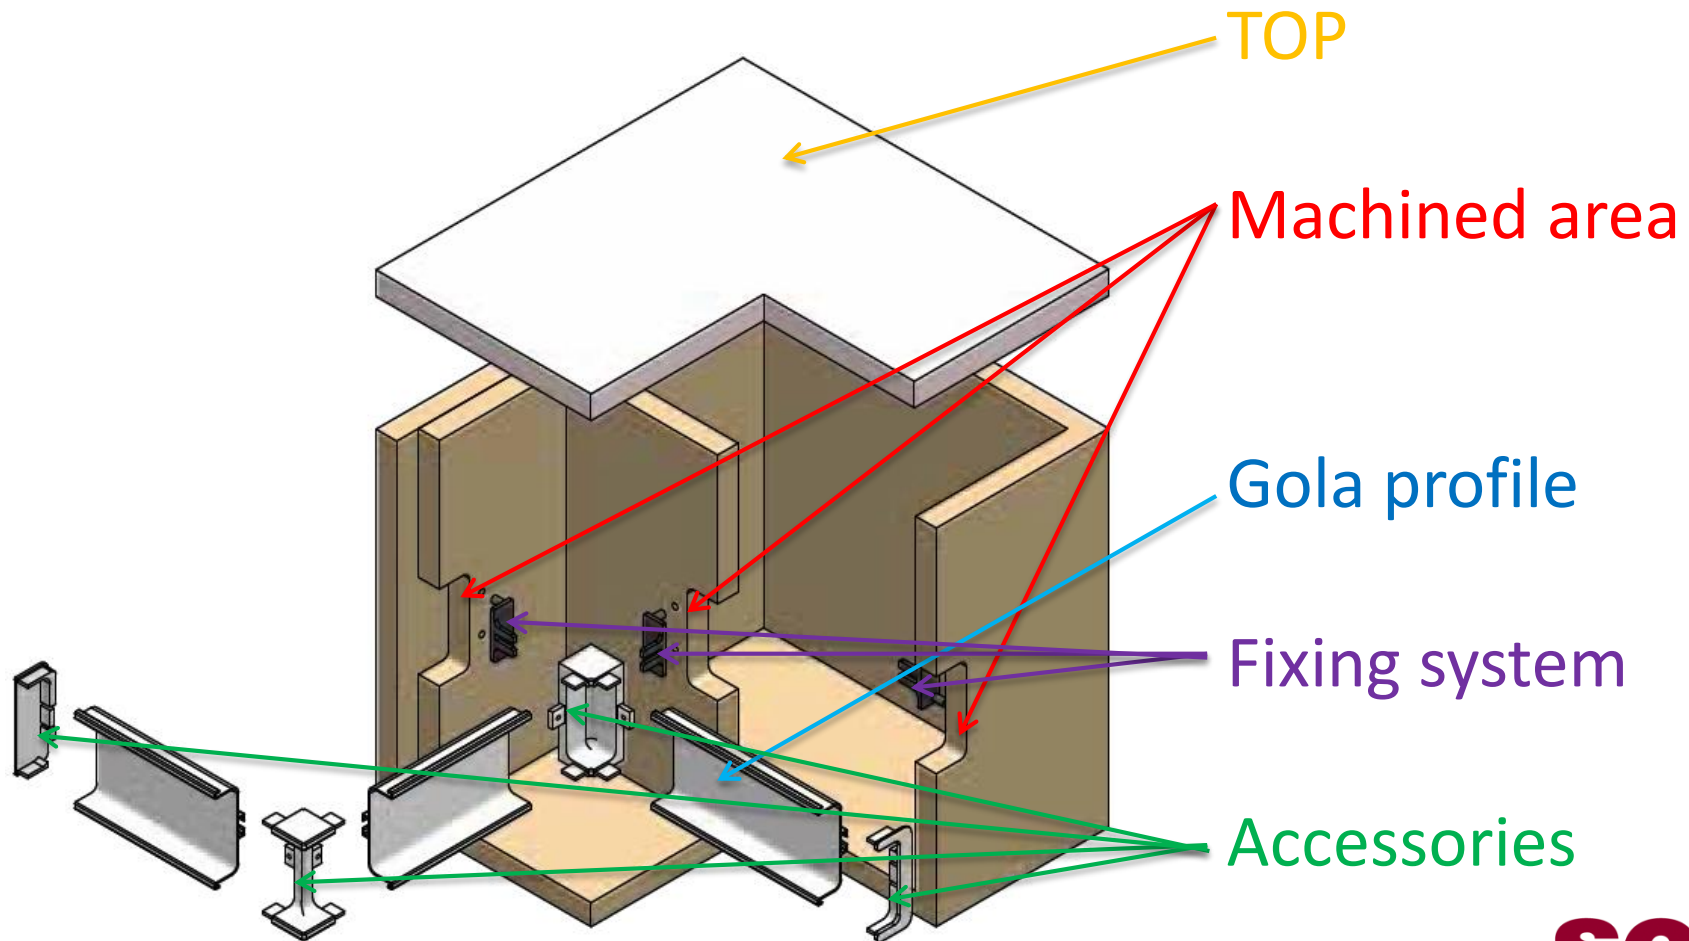

Horizontal profiles for drawers 8007 & 8045

Machining of the cabinet


Machined Area on the side panel 26 x 73 mm

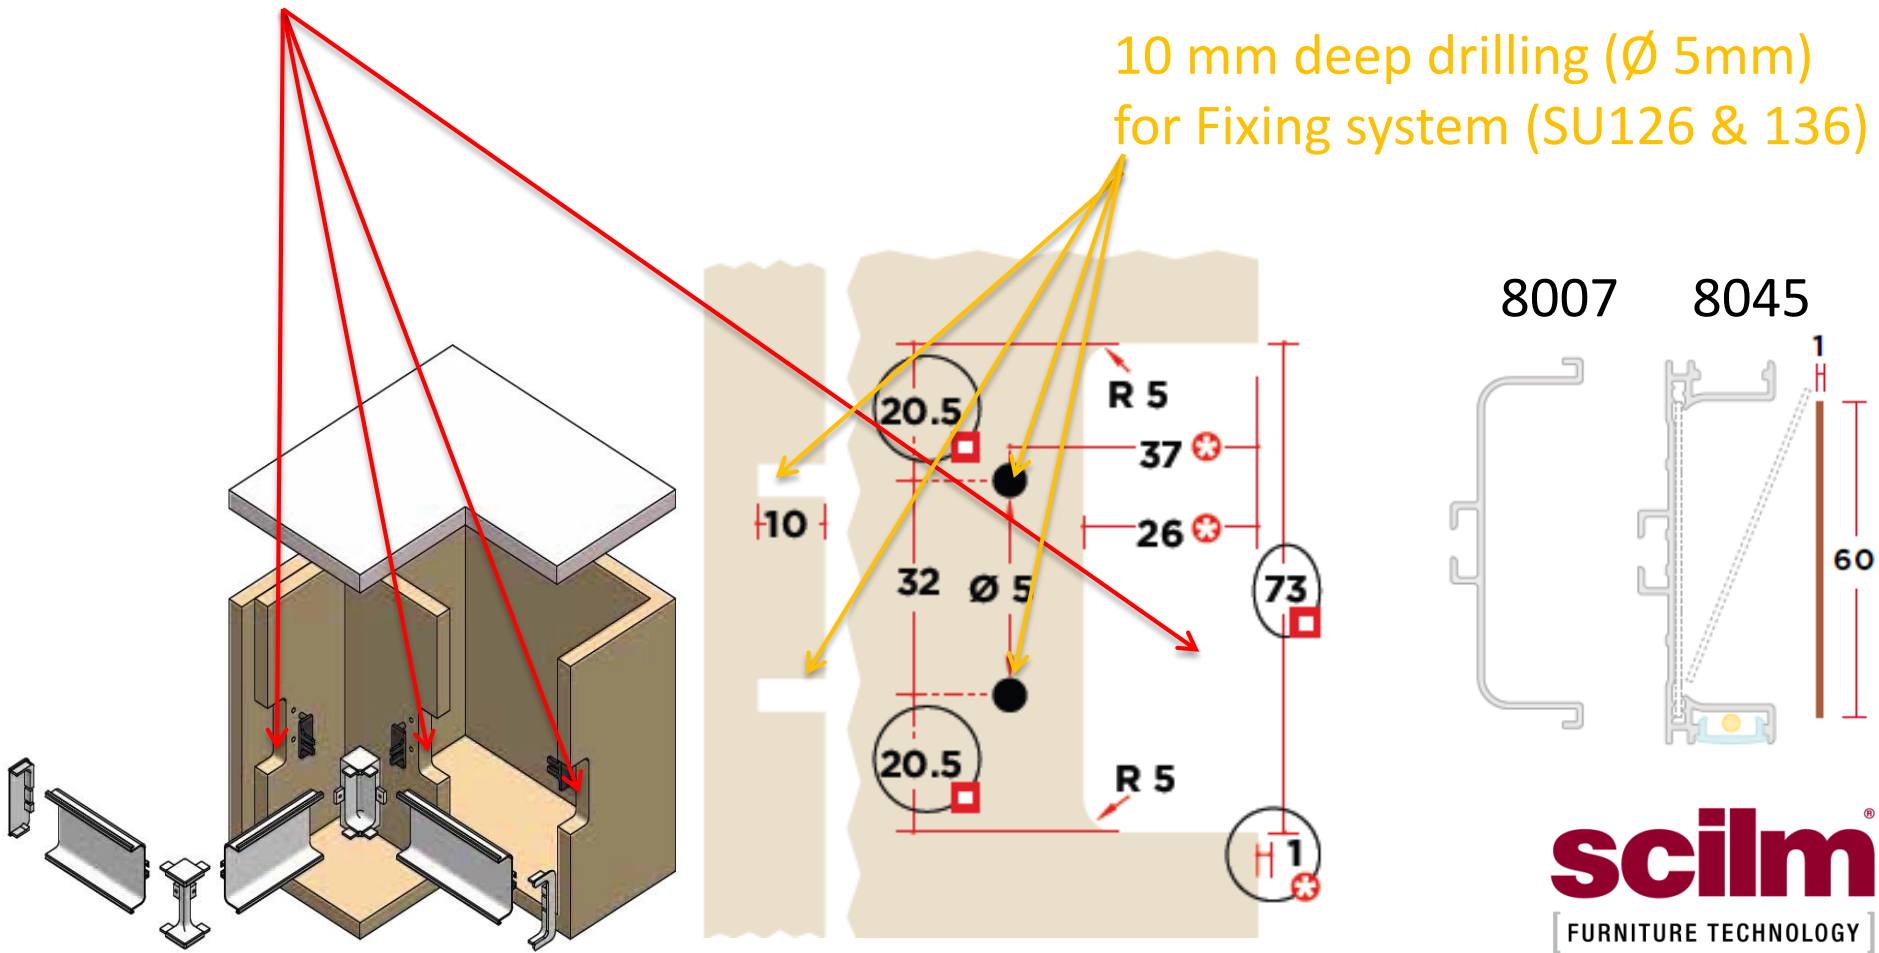

Horizontal profiles for drawers 8007 & 8045

Machining of the cabinet

Drilling distance for fixing holes (SU126 & SU136)

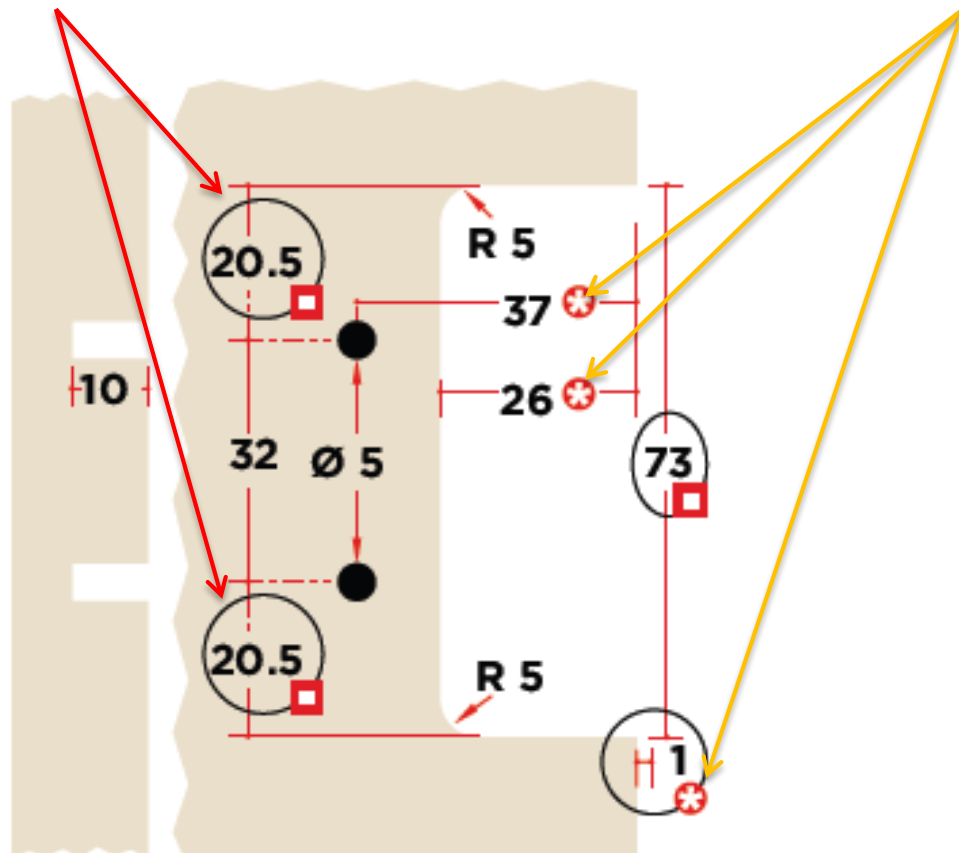




Quoted dimensions consider that Gola Profile will overcome the side of the cabinet by 1 mm.

If Gola Profile has to be flush with the cabinet sides, then the quoted dimensions has to be increased by 1 mm.

Horizontal Gola profiles

Fixing system with pins



SU126 (136)

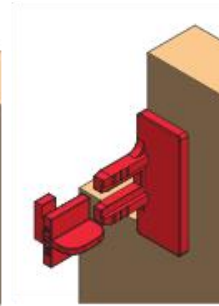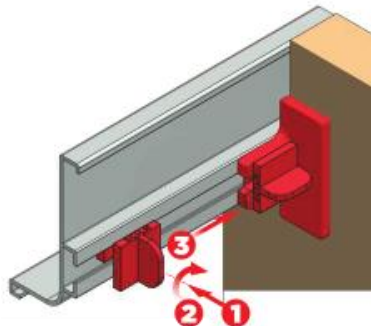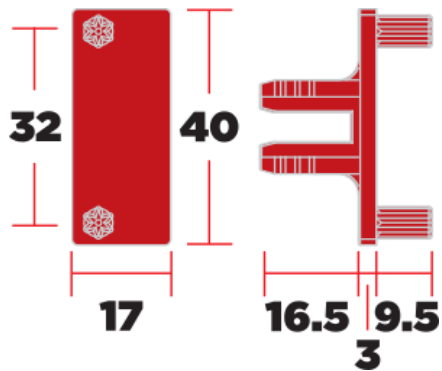

L profile

8006

8044

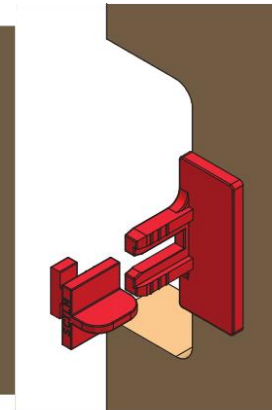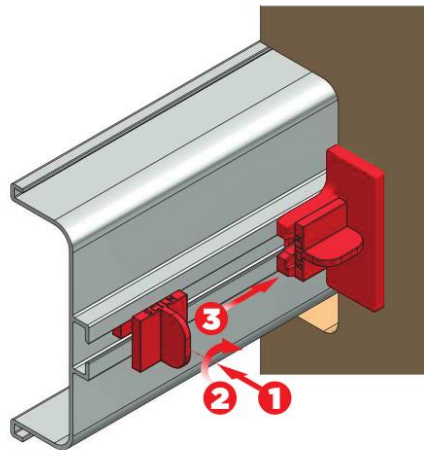

C profile




8007

8045

Horizontal Gola profiles

Fixing system with screws



SU106 (116)

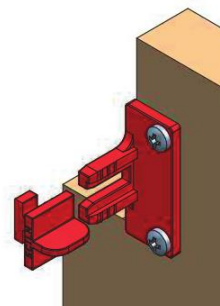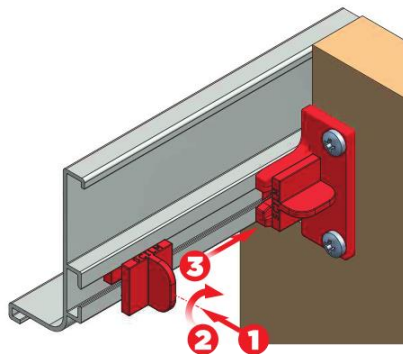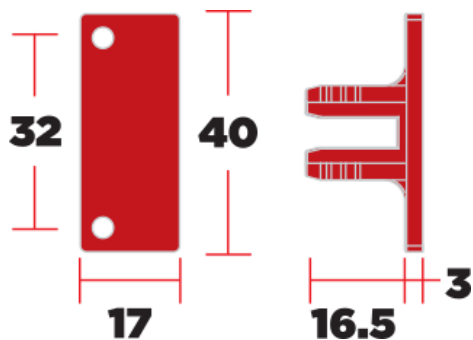

L profile

8006

8044

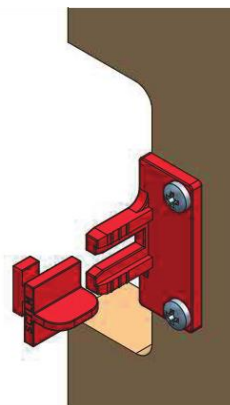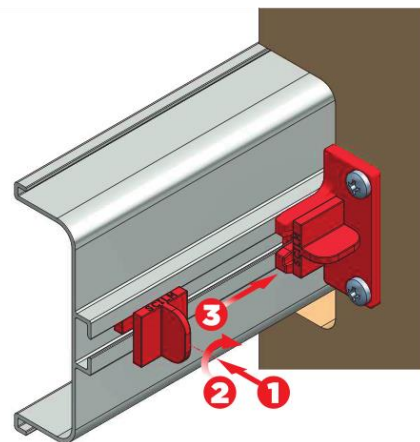

C profile

8007

8045

Vertical Gola profiles




Lateral profiles
8074 (18mm) NEW
8018 (18mm) old
8033 (16mm) NEW

Intermediate profiles
8059 (18mm) NEW
8012 (18mm) old
8032 (16mm) NEW


Lateral Vertical Gola profiles 8074 & 8033

Profile dimensions

8074 for 18 mm panel

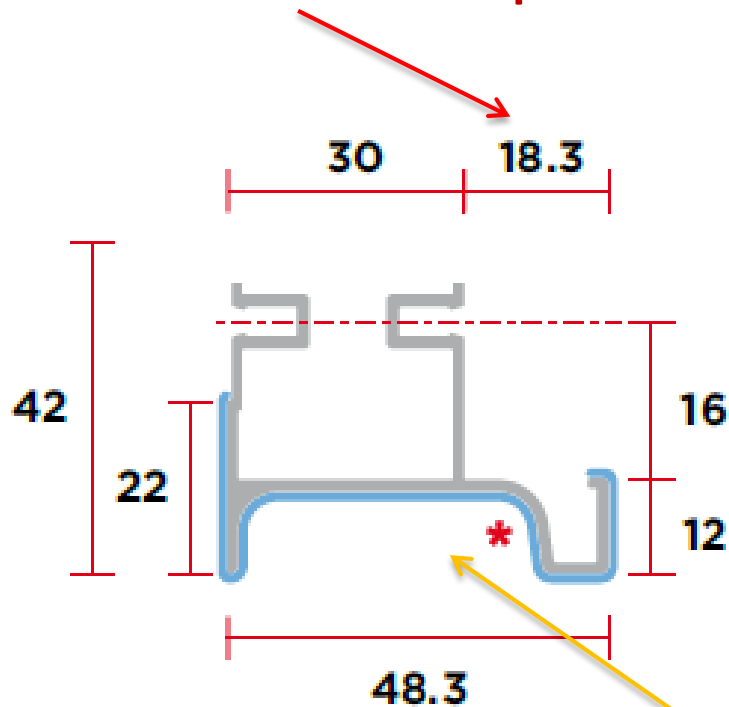

8033 for 16 mm panel

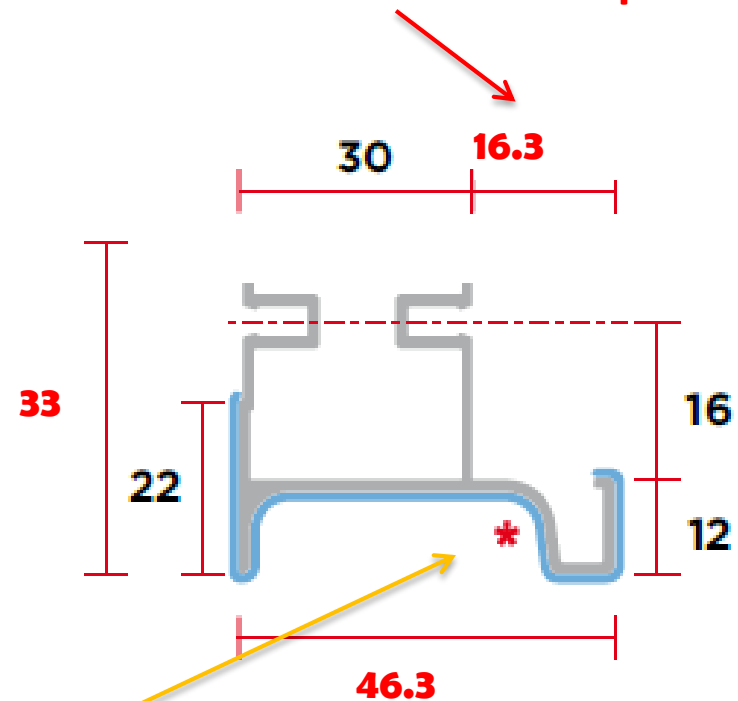


10 mm Handle grip dimension

Intermediate Vertical Gola profiles 8059 & 8032

Profile dimensions


8059 for 18 mm panel

8032 for 16 mm panel

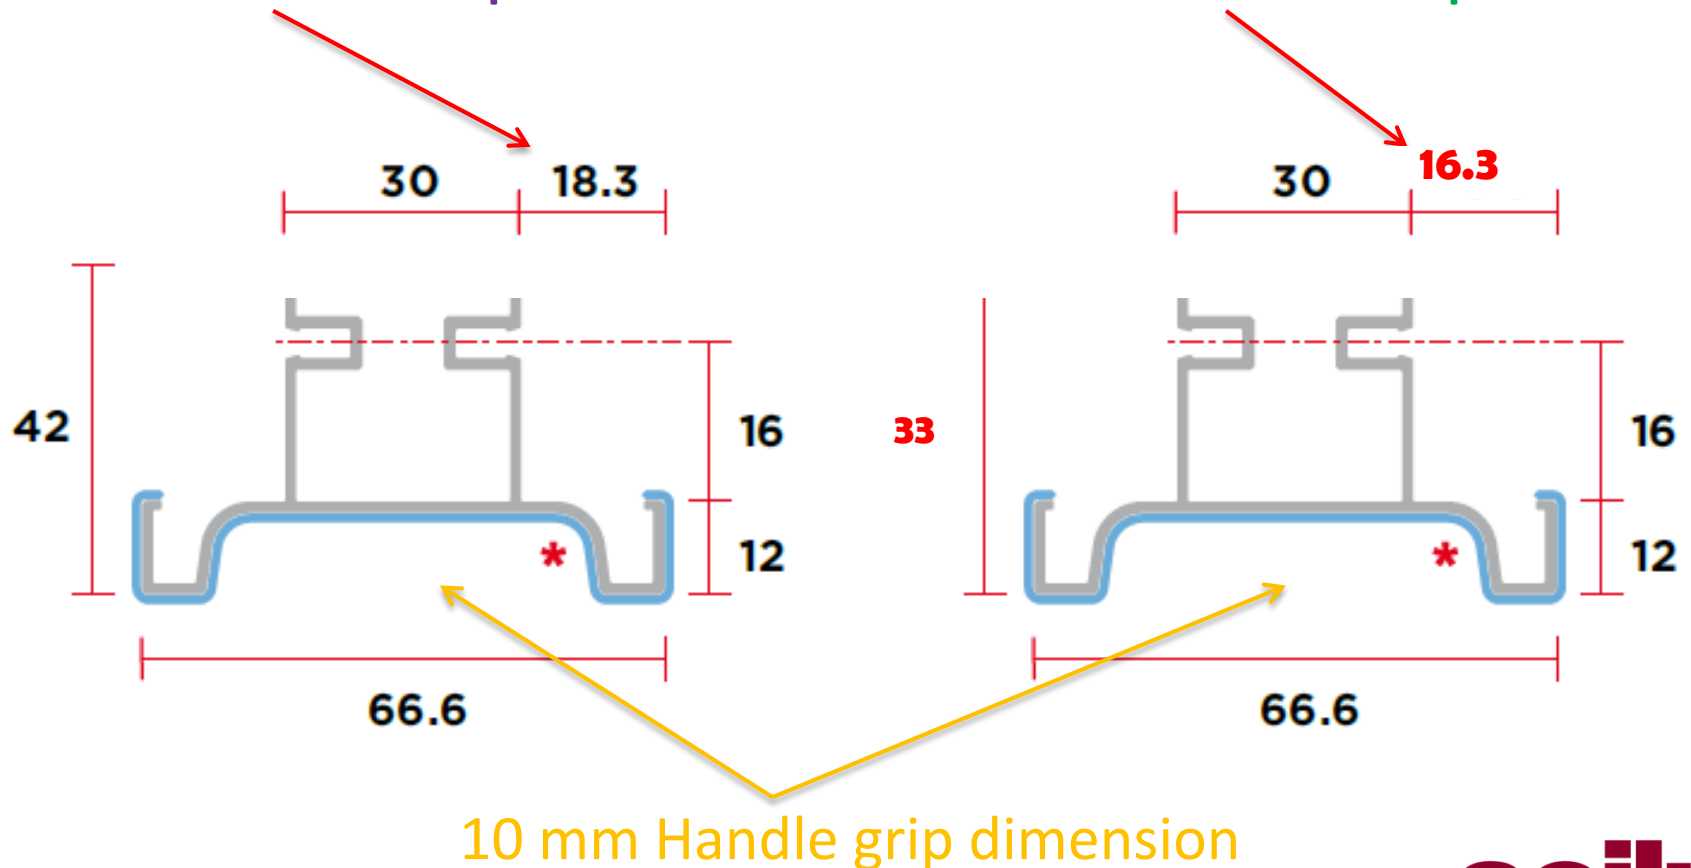


Lateral Vertical Gola profiles 8074 & 8033

Fitting explanation

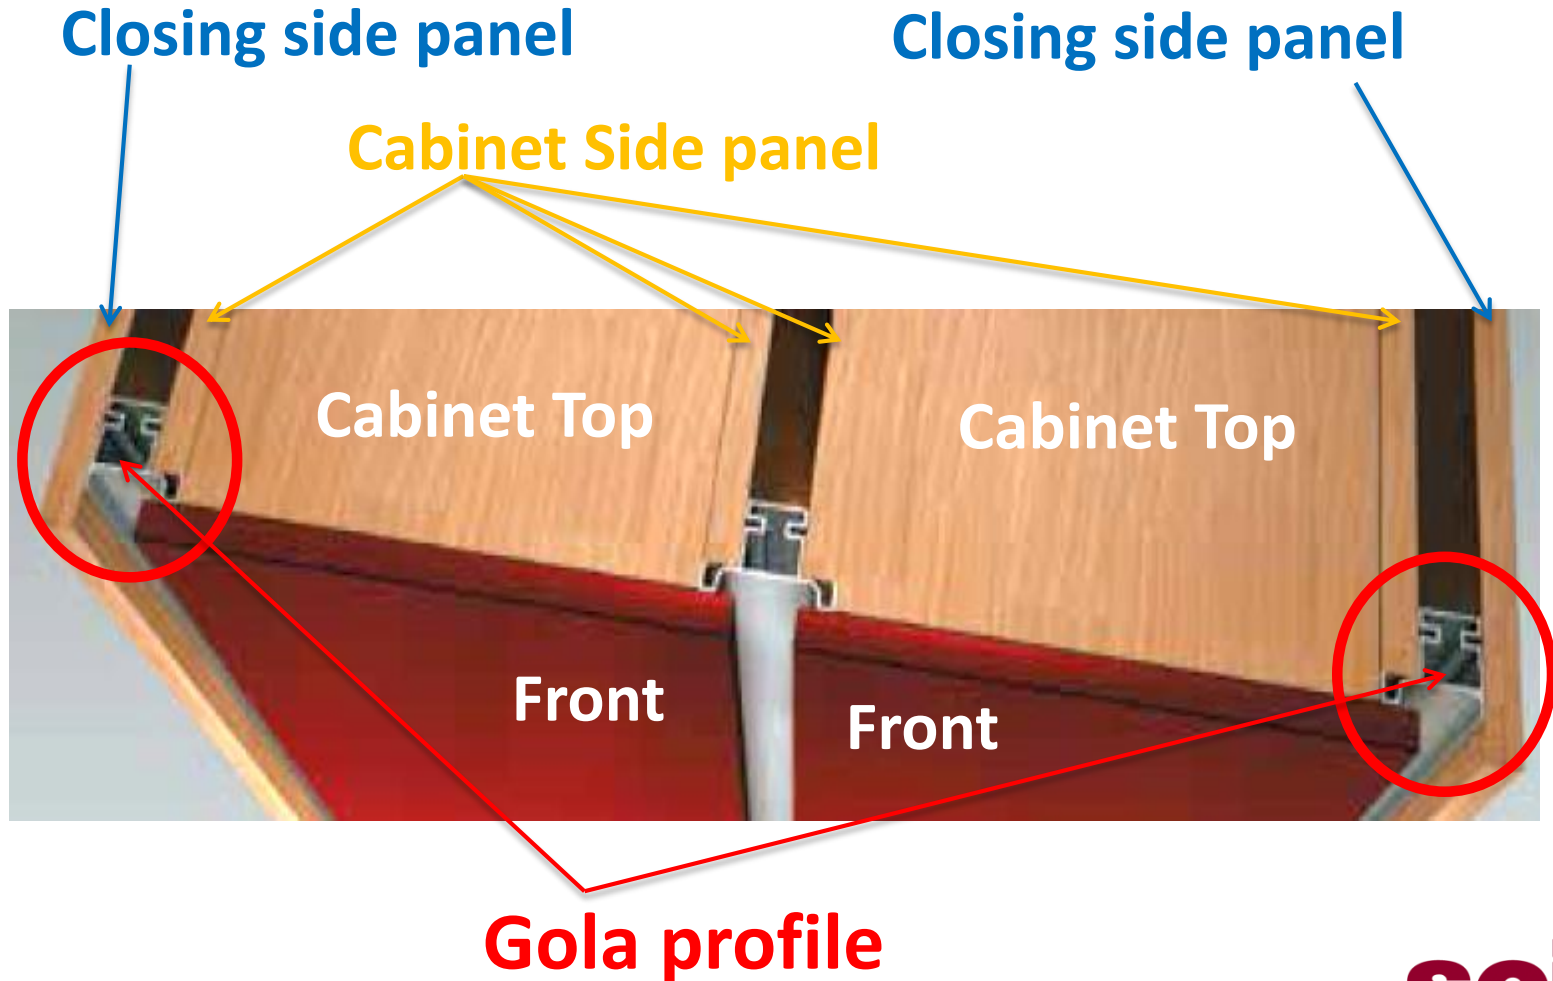

Intermediate Vertical Gola profiles 8059 & 8032

Fitting explanation

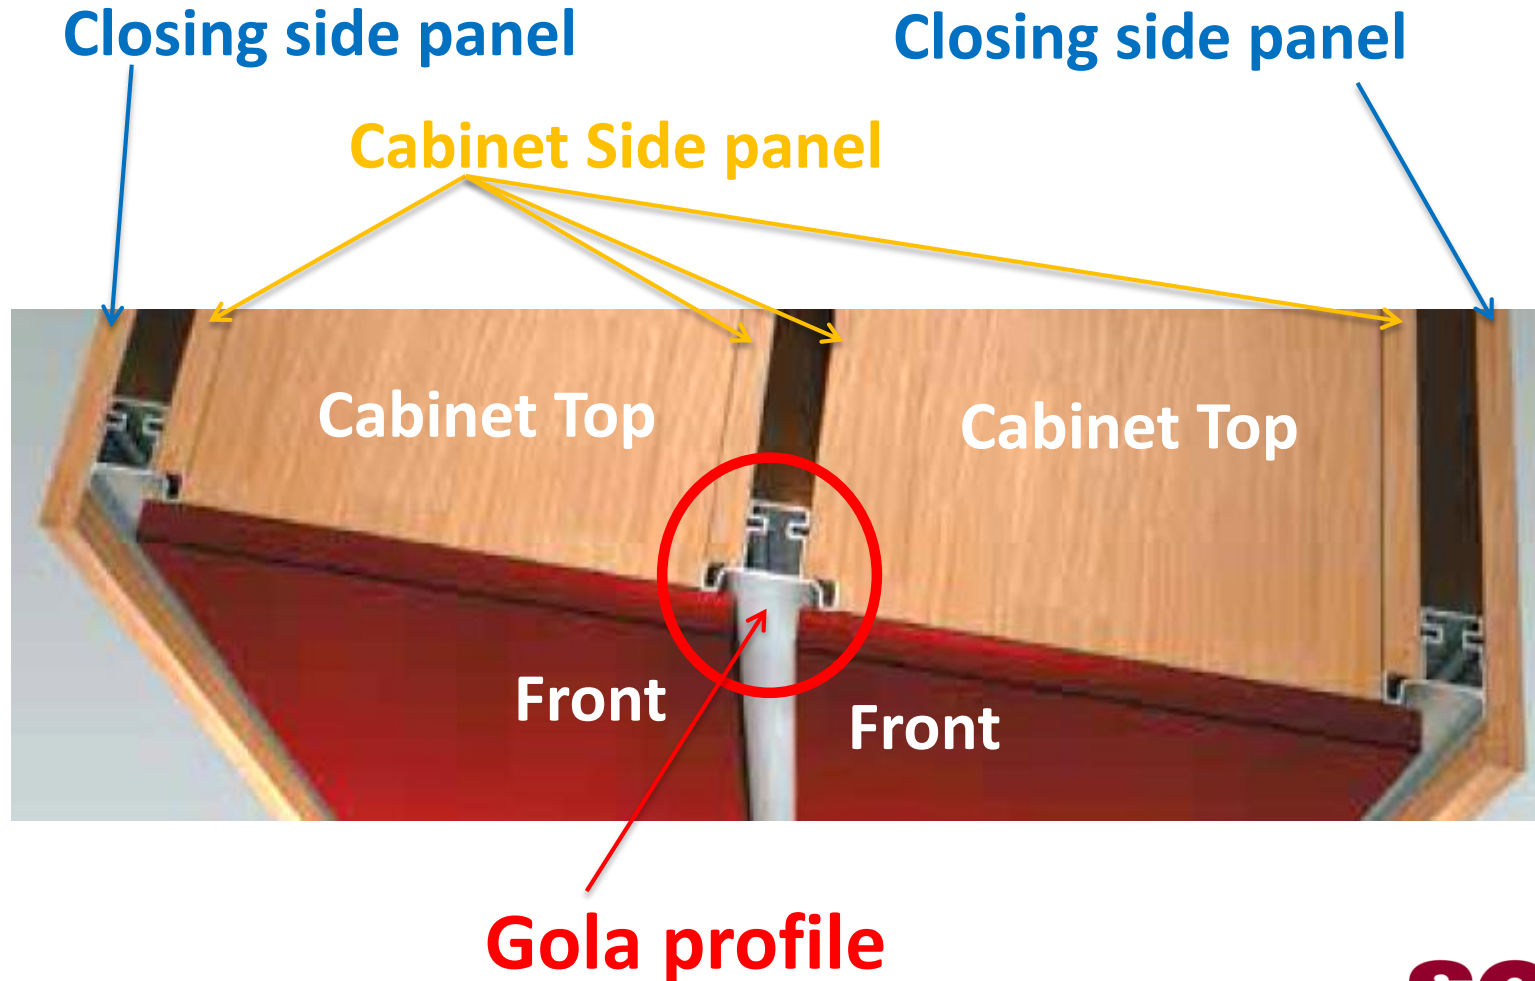

Lateral Vertical Gola profiles 8074 & 8033

Machining of the cabinet

Closing side panel

Closing side panel

Cabinet Side panel has to be reduced by 10 mm comparing to standard cabinet side panel

25 x 4,2 screw
self threaded

25 x 4,2 screw
self threaded

8033
8074

8032
8059


8033
8074

10

Front

Front

Gola profile

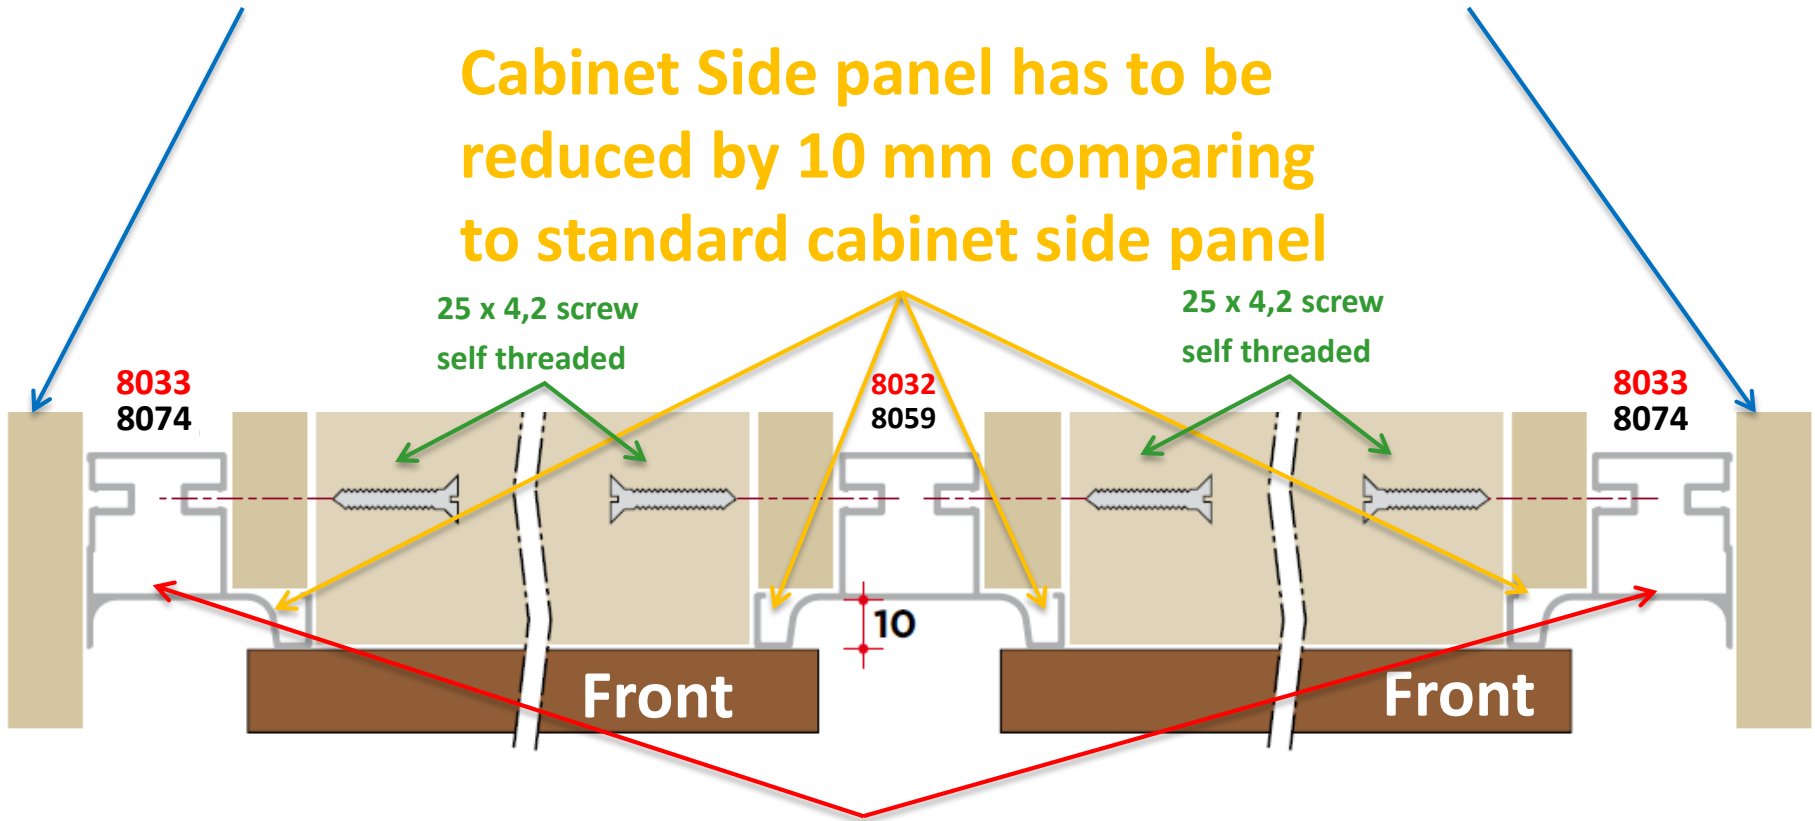

Intermediate Vertical Gola profiles 8059 & 8032

Machining of the cabinet

Closing side panel

Closing side panel

Cabinet Side panel has to be reduced by 10 mm comparing to standard cabinet side panel


25 x 4,2 screw
self threaded

25 x 4,2 screw
self threaded

8033
8074

8032
8059

8033
8074

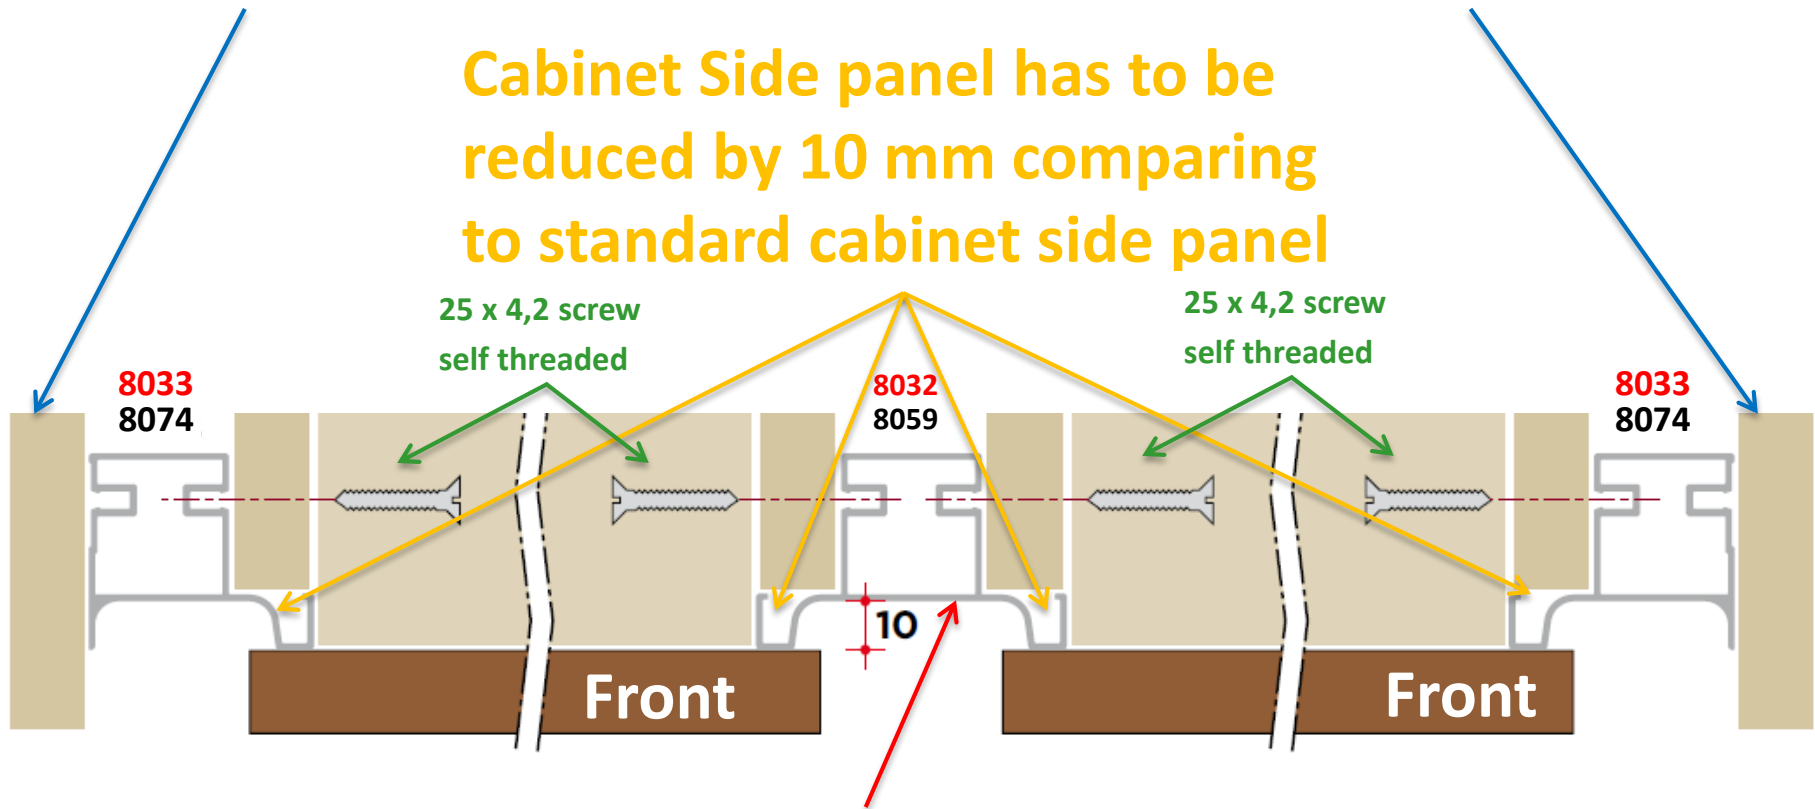

Gola profile

Thank you for your attention

